

IMPORTANT

Enter information from machine nameplate:

CLASS _____

SERIAL NO. _____

PARTS MANUAL

Mid city

JOY™

AIR COMPRESSOR

CLASS WN-112

Series Size 14½ - 9¼ x 7

Series Size 16 - 10 x 7


Series Size 17 - 10 x 7



JOY MANUFACTURING COMPANY
INDUSTRIAL COMPRESSOR GROUP
MICHIGAN CITY, INDIANA 46360

ILLUSTRATED PARTS MANUAL

JOYTM AIR COMPRESSORS CLASS WN-112

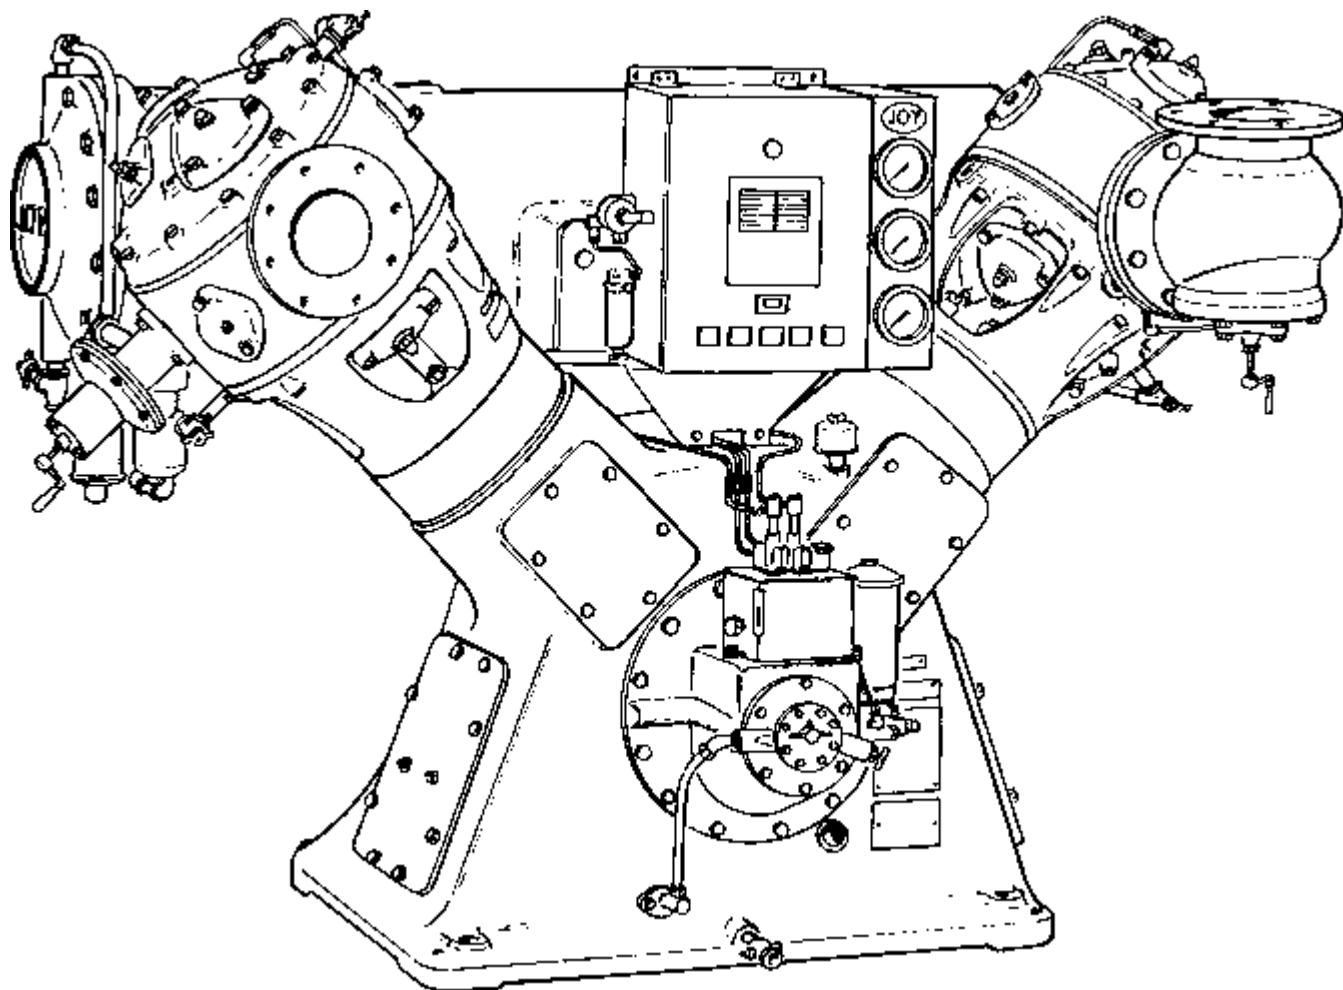

80-64



- IMPORTANT NOTICE -

The importance of safeguarding this Parts Manual from damage or loss can not be overemphasized. Identify it to your particular machine by entering the information from the machine nameplate into the spaces provided on the front cover and on the introduction page. This is to obtain maximum accuracy when ordering repair parts. It is our desire to serve you as efficiently as possible. Your cooperation will be greatly appreciated.

INTRODUCTION TO PARTS LISTING

Serial (Shop) No. _____ Class _____ Model _____ Size _____ PSI _____

INTRODUCTION

This parts list has been designed to furnish you a method to identify and order replacement parts. Since this listing may support coverage for more than one machine in its series, it is important that you become familiar with the identification of your machine as given on the Machine Nameplate. ENTER THIS INFORMATION IN THE SPACE PROVIDED ABOVE AND ON THE FRONT COVER.

MACHINE IDENTIFICATION NAMEPLATE

An explanation of the machine identification nameplate is as follows:

Class - WN-112 indicates the machine is a two-stage unit requiring cylinder lubrication. WNOL-112 is the same with the exception that the cylinder "does not" require cylinder lubrication.

Model - There are three models - E, C, and B. The "E" model has the motor flange mounted to the compressor. A "C" indicates that the motor is driven through a coupling, and the "B" model is belt driven. A Model letter accompanied by "H" indicates higher R.P.M.

Size - The first number gives the size of the first stage cylinder(s). The second number gives the size of the second stage cylinder(s). The last number is the length of the piston stroke. For this series size of machines, all are seven inch stroke.

Max. Press. (Lbs.) - This is the maximum operating pressure for your machine, given in Pounds Per Square Inch Gauge.

Serial Number (Shop Number) - Positive machine identification with respect to Manufacturing Records. ALWAYS GIVE THIS NUMBER WHEN ORDERING PARTS.

HOW TO USE PARTS LIST

Using the "Index to Parts List", determine the assembly in which the part is located. Then, turn to the corresponding Illustration and Listing. Locate the part on the illustration and note the applicable Reference Number. The corresponding reference number in the parts listing will give you the description, quantity, and number of the part. Be sure to obtain part number from the applicable machine identification column.

NOTE

When parts are common for all models, the column head will read ALL MODELS.

Parts illustrations are for parts identification only. Not to be used for disassembly or re-assembly.

HOW TO ORDER PARTS

When ordering parts, be sure to include Class, Size and Serial Number of machine for which parts are required. Give part number and description of each part or assembly needed. Do not use illustration reference numbers when ordering parts.

WHERE TO ORDER PARTS

Parts should be ordered through your authorized Joy Manufacturing Company DISTRIBUTOR. Orders will not be accepted at the factory, since your DISTRIBUTOR is equipped and located to provide you with the best possible service.

Joy Manufacturing Company maintains Regional Parts Warehouses in the following areas to provide prompt services to distributors for maintaining customers machines.

JOY MANUFACTURING COMPANY:

North Central Region (CENTRAL SERVICE CENTER)

2300 Devon Ave., Elk Grove Village, IL 60007

Western Region

4907 Nome St., Denver, CO 80239

South Western Region

9200 King Arthur Dr., Dallas, TX 75220

South Eastern Region

6217 Baum Dr., Knoxville, TN 37919

Far Western Region

283 Wattis Way, So. San Francisco, CA 94080

Central Region

575 Fee Fee Rd., St. Louis, MO 63043

North Eastern Region

Stump Rd., Mont. Ind. Ctr., Montgomeryville, PA 18936



RECOMMENDED SPARES

Recommended spare parts are called out in each parts listing. A symbol is used to denote each part as indicated by a footnote. It is suggested that these parts be procured and be made available to support scheduled maintenance and services.


INDEX TO PARTS LIST

Chassis Assembly	2-5
Intercooler Assembly	6-7
First Stage Cylinder and Parts	8-9
Second Stage Cylinder and Parts	10-11
Valve Assemblies and Parts	12-13
Control Parts and Piping:	
Total Closure Control	14-15
Inlet Valve Regulation	16-17
Water Piping, Oil Filter and	
Miscellaneous Parts	18-19
Lubricator Piping and Parts	20

CHASSIS ASSEMBLY

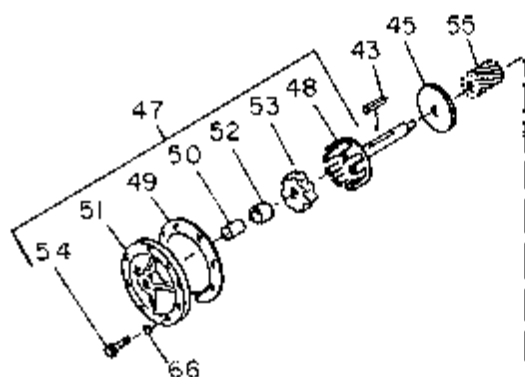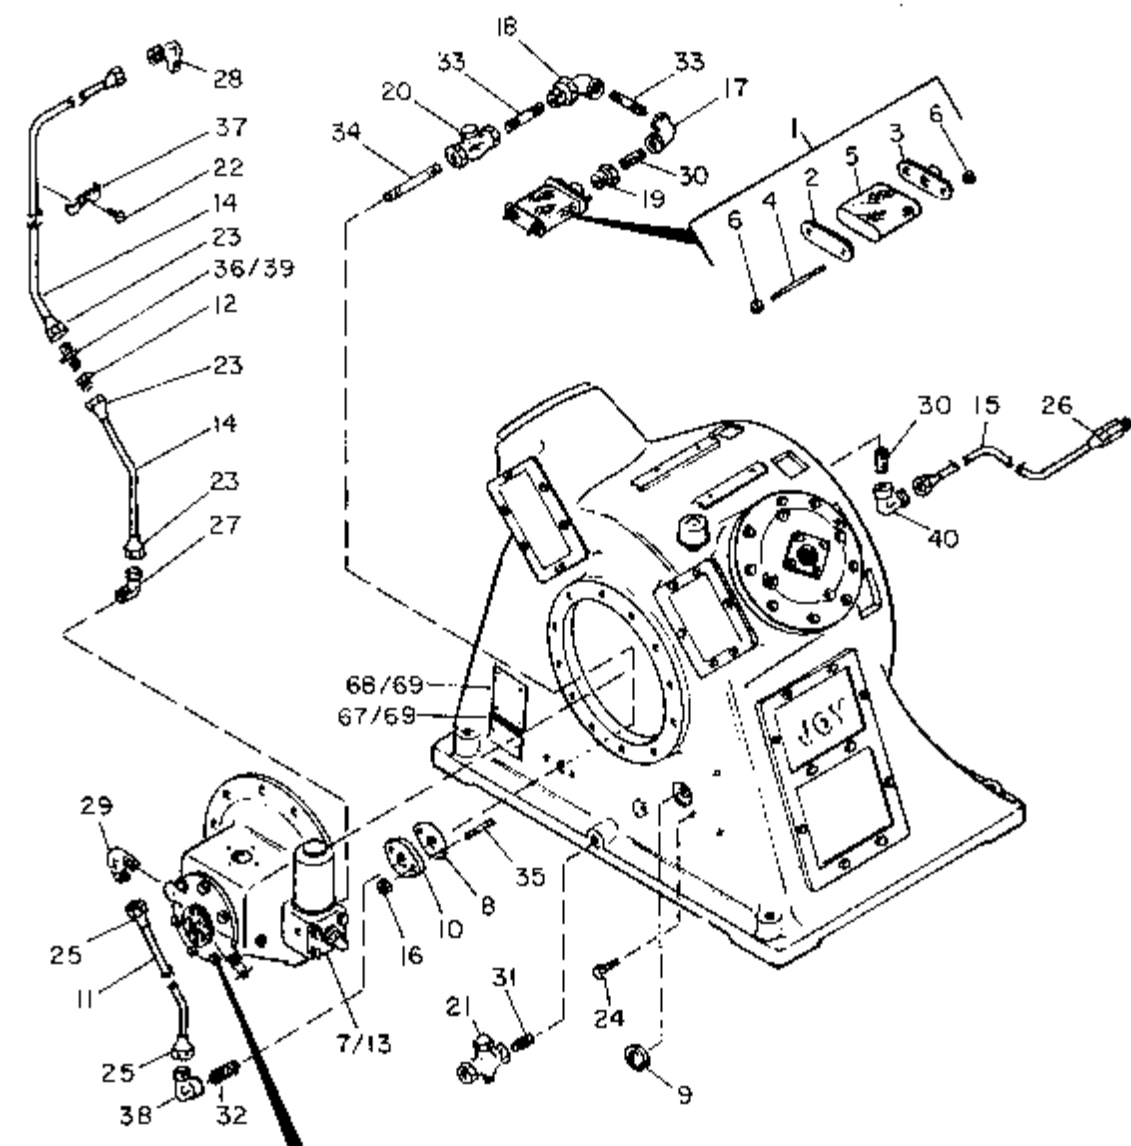

OIL PUMP ASSEMBLY

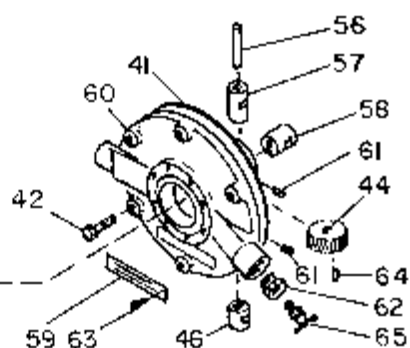

CHASSIS ASSEMBLY

(Part 1 of 2)


PAGE 3

Ref. No.	Description	ALL MODELS	
		Qty.	Part No.
1	CHASSIS ASSEMBLY	1	00514000-0266
2	STRAINER ASSEMBLY - OIL PUMP	1	00X23774W
3	END, STRAINER (NOT SOLD SEPARATELY)	1	ONHA
4	NECK, STRAINER (NOT SOLD SEPARATELY)	1	ONHA
5	BOLT, TIE	2	00015375W
6	SCREEN	1	00016111W
7	NUT, HEX (#10 - 24) †	4	00900399-0014
8	GASKET, OIL FILTER	1	00026186W
9	*GASKET, COOLER FRAME	1	00033821W
10	GAGE, OIL	1	0A203362
11	PLATE, OIL CONNECTION	1	00241819
12	TUBE	1	00242132
13	FITTING, SPECIAL	1	03608785
14	OIL FILTER ASSEMBLY (SEE PAGE 19)	1	00527480
15	TUBE, COPPER (1/4 x 10'-0")	1	00804712
16	TUBE, COPPER	1	01683719-0085
17	NUT, HEX. (1/2 - 13) †	4	00900083-0005
18	ELBOW, 90° (3/8) †	1	00901023-0003
19	ELBOW, 90° UNION (3/8) †	1	00901079-0003
20	BUSHING, REDUCING (1/2 x 3/8) †	1	00901180-0004
21	VALVE, SWING CHECK (3/8) †	1	00901299-0002
22	COCK, STEAM - 125# (3/4) †	1	00901313-0004
23	SCREW, SELF-TAP, (#8 x 1/4) †	1	00901548-0009
24	NUT, FEMALE UNION (1/4 T.) †	9	00901753-0003
25	SCREW, HEX. HD. CAP (3/8 x 3/4) †	2	00900020-0003
26	NUT, COUPLING (5/8 T.) †	2	00901753-0008
27	CONNECTOR (3/8T x 1/4 PT)	1	00912034-0006
28	ELBOW, 90° MALE (1/4 x 1/8) †	2	00901773-0003
29	ELBOW, 90° MALE (1/4 x 1/4) †	1	00901773-0004
30	ELBOW, 90° (5/8 T. x 3/4 P.T.) †	1	00901773-0015
31	NIPPLE, PIPE (3/8 x 1) †	2	00902466-0012
32	NIPPLE, PIPE (3/4 x 1 3/8) †	1	00902466-0041
33	NIPPLE, PIPE (3/4 x 1 1/2) †	1	00902466-0050
34	NIPPLE, PIPE (3/8 x 2) †	2	00902466-0057
35	NIPPLE, PIPE (3/8 x 5) †	1	00902466-0165
36	BOLT, STUD (1/2 x 1 3/4) †	4	00902772-0053
37	UNION, COUPLING (1/4) †	2	00902805-0003
38	CLIP, DOUBLE (1/4 O.D.) †	1	00902832-0001
39	ELBOW, 90° (5/8 T. x 3/4 P.T.) †	1	00904736-0016
40	COUPLING (1/4 T. x 1/8 P.T.) †	1	00904736-0002
	ELBOW, 90° (3/8 T. x 3/8 P.T.) †	1	00905384-0009
41	OIL PUMP AND MOUNTING PARTS	1	00701324-0021
42	GASKET, PUMP HOUSING	1	00202552
	SCREW, HEX. HD. CAP	6	00900020-0024
	*ROTARY OIL PUMP ASSEMBLY	1	00514010-0012
43	KEY, SQ. ENDS (1/8 x 1/8 x 1)	1	00026118W
44	GEAR, WHEEL	1	00042535W
45	BUSHING, PUMP SHAFT FRONT	1	00202544
46	BUSHING, WORM GEAR SHAFT	1	00202545
47	PUMP, OIL	1	0A202560
48	ROTOR (NOT SOLD SEPARATELY)	1	ONHA
49	GASKET	1	00202548
50	PIN, IDLER	1	00204208
51	COVER (NOT SOLD SEPARATELY)	1	ONHA
	IDLER ASSEMBLY	1	01607639
52	BUSHING (NOT SOLD SEPARATELY)	1	ONHA
53	IDLER (NOT SOLD SEPARATELY)	1	ONHA
54	SCREW, CAP †	8	00900020-0001
55	GEAR, WORM LUBR. DRIVE	1	00204064
56	SHAFT, WORM WHEEL GEAR	1	00237997
57	BUSHING, SHAFT	1	00237998
58	BUSHING, PUMP SHAFT REAR	1	01600440
59	PLATE, INSTRUCTION	1	01607316
60	HOUSING, OIL PUMP	1	01760324-0005
61	SCREW, HEX. SOC. SET	5	00900502-0031
62	BUSHING, REDUCING (1/2 x 1/8) †	1	00901158-0004
63	SCREW, SELF. TAP. (#8 x 1/4) †	2	00901548-0009
64	KEY, WOODRUFF (1/8 x 1/2) †	1	00901848-0404
65	COCK, DRAIN (1/8) †	1	00903873-0010
66	GASKET, SOLID (7/16 O.D. x 17/64 I.D.)	8	00903943-0039
67	PLATE, INSTRUCTION	1	00211819-0020
68	NAMEPLATE, INSTRUCTION	1	00212478
69	SCREW, SELF TAPPING (#8 x 1/4) †	6	00901548-0009

b-31

* Recommended Spare † Standard Hardware Item, Procure Locally ONHA Order Next Higher Assembly

CHASSIS ASSEMBLY

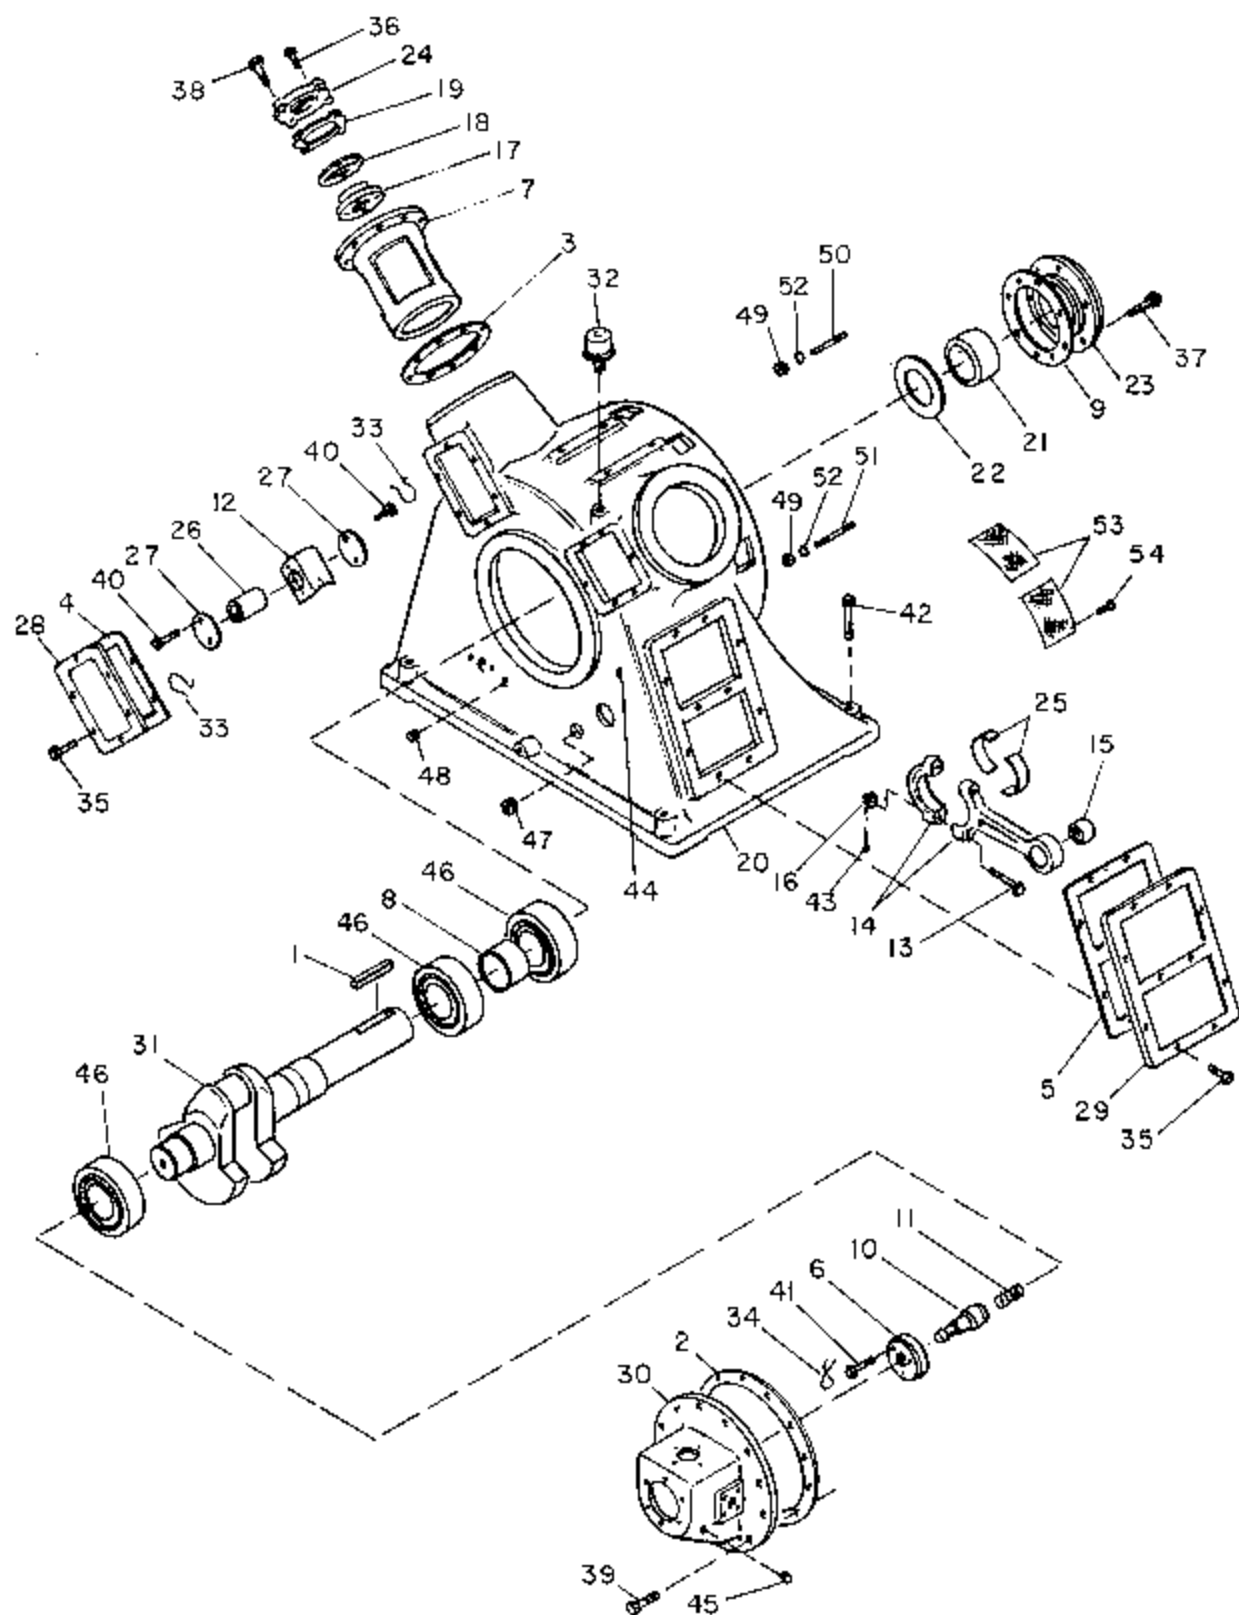

CHASSIS ASSEMBLY

(Part 2 of 2)

PAGE 5

Ref. No.	Description	ALL MODELS	
		Qty.	Part No.
	CHASSIS ASSEMBLY (Cont'd)		00514000-0266
1	. KEY	1	00018672W
2	. *GASKET, MAIN BEARING BRACKET	1	00026007W
3	. GASKET, DISTANCE PIECE	2	00026187W
4	. *GASKET, COVER	2	00028170W
5	. *GASKET, COVER	2	00028172W
6	. RETAINER, FRONT BEARING	1	00029985W
7	. GUIDE, CROSSHEAD	2	00030342W
8	. PIECE, DISTANCE	1	00032629W
9	. *GASKET, GUARD & BEARING	1	00032632W
10	. PIN, RETAINING - FRONT BEARING	1	00032642W1
11	. SPRING	1	00032643W
12	. CROSSHEAD	2	00205980
	. CONNECTING ROD ASSEMBLY	2	00527596
13	. BOLT, CONNECTING ROD	2	00026168W
14	. ROD, CONNECTING	1	00030028W
15	. *BUSHING, WRIST PIN	1	01603224
16	. NUT	2	00900191-0007
17	. PLATE	2	01246677
18	. GASKET	2	01248314
19	. GASKET	2	01249173
20	. FRAME	1	01608627
21	. COLLAR, SHAFT	1	01602879
22	. FLINGER	1	01602880
23	. RETAINER	1	01602881
24	. ADAPTOR, SCRAPER PLATE	2	01603674
25	. *BEARING, CRANKPIN (2 PC.)	2	01608500
26	. *PIN, WRIST	2	01608503
27	. COVER, CROSSHEAD PIN	4	01608781
28	. COVER, FRAME	2	01609507
29	. COVER, FRAME	2	01609508
30	. BRACKET, MAIN BEARING	1	01760344-0050
31	. CRANKSHAFT	1	03603746
32	. BREATHER, CRANKCASE	1	00526160
33	. WIRE (#20 GA. x 4'-0")	1	00800741
34	. WIRE (1/16 x 12")	1	00809023
35	. SCREW, HEX. HD. CAP (1/2 x 1) †	30	00900020-0014
36	. SCREW, HEX. HD. CAP (3/8 x 1 1/4) †	8	00900020-0023
37	. SCREW, HEX. HD. CAP (1/2 - 13 x 1 1/4) †	8	00900020-0024
38	. SCREW, HEX. HD. CAP (1/2 x 1 1/2) †	8	00900020-0034
39	. SCREW, HEX. HD. CAP (5/8 x 2) †	12	00900020-0055
40	. SCREW, HEX. HD. CAP (3/8 x 3/4)	8	00900028-0003
41	. SCREW, HEX. HD. CAP (1/2 - 13 x 1 3/4)	3	00900028-0044
42	. SCREW, SQ. HD. SET (3/4 - 10 x 4)	4	00900122-0172
43	. PIN, COTTER (5/32 x 1 3/4) †	4	00900620-0029
44	. PLUG, PIPE (1/4) †	1	00901921-0002
45	. PLUG, HEX. SOC. HD. (1/2) †	1	00901921-0004
46	. BEARING, ROLLER	3	00903719-0032
47	. PLUG, PIPE (1 1/2) †	1	00901204-0008
48	. PLUG, PIPE (3/4) †	3	00901921-0005
	MOUNTING PARTS		00700503-0024
49	. NUT, HEX. (5/8) †	12	00900160-0006
50	. BOLT, STUD (5/8 x 3) †	6	00902772-0115
51	. BOLT, STUD (5/8 x 7) †	6	00902772-0283
52	. GASKET, SOLID COPPER	2	00903943-0003
	GUARD AND PARTS		00704714-0001
53	. GUARD	2	01652901-0037
54	. SCREW	16	00905827-0021


6/81

* Recommended Spare † Standard Hardware Item, Procure Locally

INTERCOOLER ASSEMBLY

ITEM 12 POP SAFETY VALVE SELECTION CHART

MACHINE SIZE	MODEL	PART NUMBER
14 1/2 - 9 1/4 x 7	E, B	0A200004-0067
14 1/2 - 9 1/4 x 7	EH, BH	0A200004-0044
16 - 10 x 7	E, B	0A200004-0067
16 & 17 - 10 x 7	EH, BH	00527123-0004

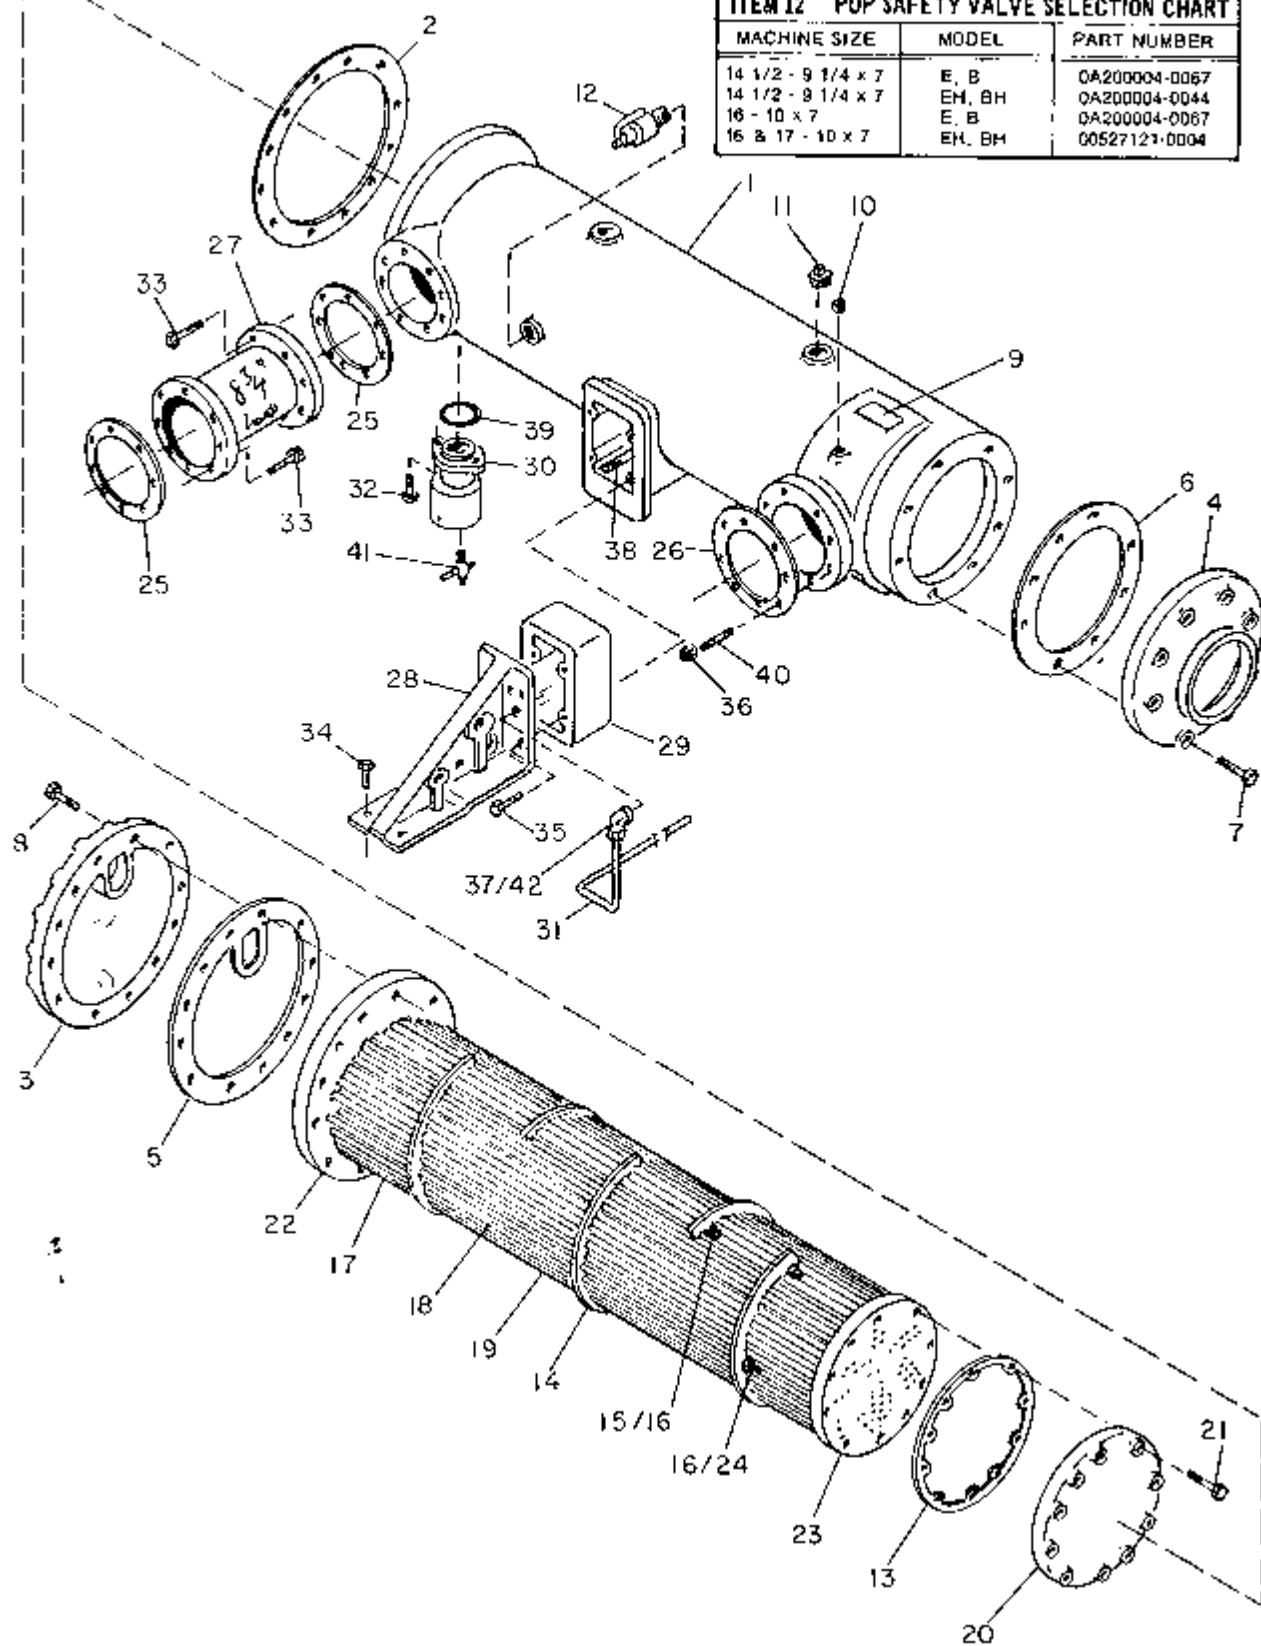

Ref. No.	Description	MODEL E/EH & B/BH SIZE 14 1/2 - 9 1/4 x 7 80 - 125 PSIG MODEL E/B SIZE 16 - 10 x 7 80 - 125 PSIG		MODEL EH-BH SIZE 16 - 10 x 7 SIZE 17 - 10 x 7 80 - 125 PSIG	
		Qty.	Part No.	Qty.	Part No.
	INTERCOOLER ASSEMBLY		00527400-0003		00527400-0005
1	SHELL, INTERCOOLER	1	00028467WA	1	S
2	GASKET, MAIN TUBE PLATE TO SHELL	1	00028542W	1	S
3	COVER, INTERCOOLER END	1	00210520	1	S
4	COVER, INTERCOOLER END	1	00213718	1	S
5	GASKET, MAIN TUBE PLATE	1	00214710	1	S
6	GASKET, END COVER TO SHELL	1	00214686	1	S
7	SCREW, CAP (3/4)	8	00214711	8	S
8	SCREW, CAP SPECIAL	12	00214712	12	S
9	PLATE, NAME ASME & NATIONAL BO.	1	01606829-0007	1	S
10	PLUG, PIPE COUNTER SUNK (3/4 NP)	1	00901219-0005	1	S
11	PLUG, PIPE COUNTER SUNK (2 1/2)	2	00901219-0010	2	S
12	*VALVE, POP SAFETY (REFER TO CHART)	1	SEE PAGE 6	1	S
	INTERCOOLER TUBE NEST ASSEMBLY		00514079-0011		00514079-0073
13	GASKET, FLOATING TUBE PLATE TO COVER	1	00028543W	1	S
14	PLATE, BAFFLE	5	00028473W1	5	01605905
15	ROD, BAFFLE PLATE SHORT	1	00029751W	4	01228250-0007
16	ROD, BAFFLE PLATE LONG	3	00029752W		
17	SPACER, BAFFLE PLATE SHORT	11	00029753W	16	01605906
18	SPACER, BAFFLE PLATE LONG	4	00029754W	4	01606760
19	TUBE, INTERCOOLER	152	00034258W	194	S
20	COVER, PLATE FLOATING TUBE	1	00210519	1	S
21	SCREW, CAP SPECIAL	10	00214717	10	S
22	PLATE, MAIN TUBE	1	00213719	1	01605903
23	PLATE, FLOATING TUBE	1	00213720	1	01605904
24	NUT, BRASS HEX. (1/2 - 13 NC)	4	00900161-0005	4	S
	AIR CONNECTION AND MOUNTING PARTS		00700562-0069		S
25	*GASKET	2	00009066W	2	S
26	*GASKET	1	00009218W	1	S
27	PIPE, H.P. INLET	1	00028346W	1	S
28	BRACKET, INTERCOOLER	1	00034744W	1	S
29	SPACER, INTERCOOLER BRACKET	1	00028789W	1	S
30	CHAMBER, CONDENSATE	1	00042860W	1	S
31	TUBE, COPPER (1/4 x 45")	1	00804712	1	S
32	SCREW, HEX. HD. CAP (5/8 x 2) †	2	00900020-0055	2	S
33	SCREW, HEX. HD. CAP (3/4 x 2) †	16	00900020-0056	16	S
34	SCREW, HEX. HD. CAP (1 x 2 1/4) †	2	00900020-0068	2	S
35	SCREW, HEX. HD. CAP (1 x 4 1/4) †	4	00900020-0148	4	S
36	NUT, HEX. (3/4 - 10 NC) †	8	00900093-0008	8	S
37	NUT, UNION FEMALE (1/4 T.) †	1	00901753-0003	1	S
38	NIPPLE †	1	00902466-0182	1	S
39	*GASKET, COPPER (3 1/2)	1	00903729-0006	1	S
40	BOLT, STUD (3/4 - 10 NC x 3) †	8	00902772-0116	8	S
41	COCK, DRAIN (1/4) †	1	00903872-0001	1	S
42	ELBOW, (1/4 O.D. - 1/4 P.T.) †	1	00904736-0009	1	S


6/81

6/81

* Recommended Spare † Standard Hardware Item, Procure Locally

S Same Part Number as Preceding Column


FIRST STAGE CYLINDER AND PARTS

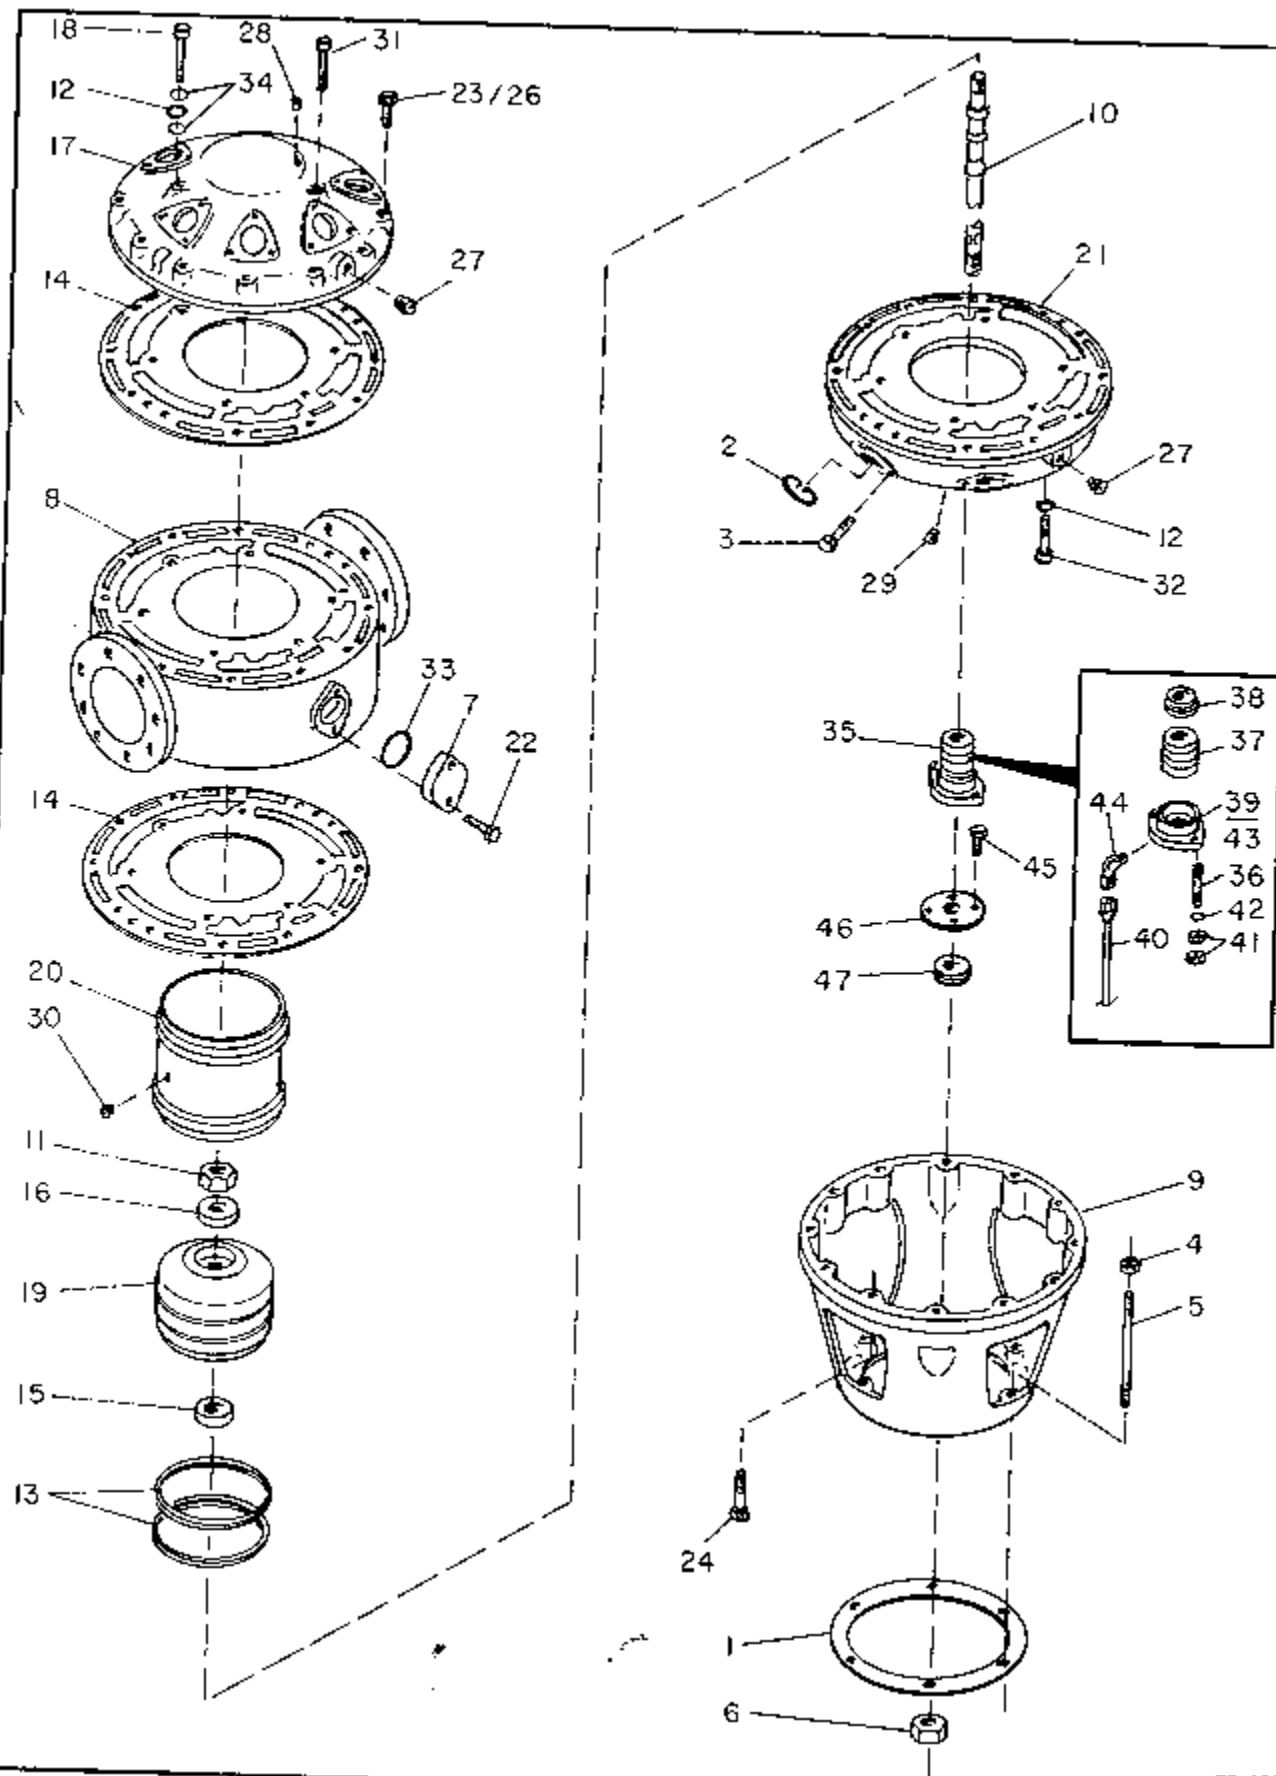

Ref. No.	Description	MODEL E & B 80 - 125 PSIG SIZE 14 1/2" O.D.A.			MODEL EH & BH 80 - 125 PSIG SIZE 14 1/2" O.D.A.			MODEL E & B 111 - 125 PSIG SIZE 16" O.D.A.			MODEL EH & BH 111 - 125 PSIG SIZE 16" O.D.A.			MODEL E & B 80 - 170 PSIG MODEL EH & BH 111 - 125 PSIG SIZE 16" O.D.A.			MODEL EH & BH 20 - 310 PSIG SIZE 17" O.D.A.		
		Qty.	Part No.	Qty.	Part No.	Qty.	Part No.	Qty.	Part No.	Qty.	Part No.	Qty.	Part No.	Qty.	Part No.	Qty.	Part No.	Qty.	Part No.
1	INLET VALVE ASSEMBLY AND PARTS (SEE PAGE 13)	8	SEE PAGE 13	8	00700502-0781	8	00700502-0781	8	00700502-0013	8	00700502-0013	8	00700502-0013	8	00700502-0013	8	00700502-0013	8	00700502-0013
2	DISCHARGE VALVE ASSEMBLY AND PARTS (SEE PAGE 13)	8	00700506-0016	8	00700506-0016	8	00700506-0016	8	00700506-0016	8	00700506-0016	8	00700506-0016	8	00700506-0016	8	00700506-0016	8	00700506-0016
3	CYLINDER ASSEMBLY	1	00026187W	1	00026187W	1	00026187W	1	00026187W	1	00026187W	1	00026187W	1	00026187W	1	00026187W	1	00026187W
4	GASKET, DISTANCE PIECE	48	00029721W1	48	00029721W1	48	00029721W1	48	00029721W1	48	00029721W1	48	00029721W1	48	00029721W1	48	00029721W1	48	00029721W1
5	SPRING, VALVE RETAINER	6	00000093-0003	6	00000093-0003	6	00000093-0003	6	00000093-0003	6	00000093-0003	6	00000093-0003	6	00000093-0003	6	00000093-0003	6	00000093-0003
6	SCREW, HEX. HD. CAP (5/8 x 2 1/4) †	6	0002772-0234	6	0002772-0234	6	0002772-0234	6	0002772-0234	6	0002772-0234	6	0002772-0234	6	0002772-0234	6	0002772-0234	6	0002772-0234
7	NUT, HEX. (3/4 x 10) †	6	00027593-0022	6	00027593-0022	6	00027593-0022	6	00027593-0022	6	00027593-0022	6	00027593-0022	6	00027593-0022	6	00027593-0022	6	00027593-0022
8	BOLT, STUD (3/4 x 5 1/4) †	1	00015172W	1	00015172W	1	00015172W	1	00015172W	1	00015172W	1	00015172W	1	00015172W	1	00015172W	1	00015172W
9	CYLINDER AND PARTS	2	00019814W3	2	00019814W3	2	00019814W3	2	00019814W3	2	00019814W3	2	00019814W3	2	00019814W3	2	00019814W3	2	00019814W3
10	COVER, CLEANING HOLE	1	00028243W2	1	00028243W2	1	00028243W2	1	00028243W2	1	00028243W2	1	00028243W2	1	00028243W2	1	00028243W2	1	00028243W2
11	PIECE, DISTANCE	1	00028115W	1	00028115W	1	00028115W	1	00028115W	1	00028115W	1	00028115W	1	00028115W	1	00028115W	1	00028115W
12	ROD, PISTON	1	00026128W2	1	00026128W2	1	00026128W2	1	00026128W2	1	00026128W2	1	00026128W2	1	00026128W2	1	00026128W2	1	00026128W2
13	NUT, PISTON ROD	1	01760368-0015	1	01760368-0015	1	01760368-0015	1	01760368-0015	1	01760368-0015	1	01760368-0015	1	01760368-0015	1	01760368-0015	1	01760368-0015
14	WASHER	4	00026702W	4	00026702W	4	00026702W	4	00026702W	4	00026702W	4	00026702W	4	00026702W	4	00026702W	4	00026702W
15	TRING, PISTON	2	00027913W	2	00027913W	2	00027913W	2	00027913W	2	00027913W	2	00027913W	2	00027913W	2	00027913W	2	00027913W
16	GASKET, CYLINDER HEAD	2	00028218W	2	00028218W	2	00028218W	2	00028218W	2	00028218W	2	00028218W	2	00028218W	2	00028218W	2	00028218W
17	WASHER, COUNTERBORED	1	00044389W	1	00044389W	1	00044389W	1	00044389W	1	00044389W	1	00044389W	1	00044389W	1	00044389W	1	00044389W
18	WASHER, PLAIN	1	00044380W	1	00044380W	1	00044380W	1	00044380W	1	00044380W	1	00044380W	1	00044380W	1	00044380W	1	00044380W
19	HEAD, TOP CYLINDER	1	0A204634	1	0A204634	1	0A204634	1	0A204634	1	0A204634	1	0A204634	1	0A204634	1	0A204634	1	0A204634
20	BOLT, LUBRICATION	1	00034475W	1	00034475W	1	00034475W	1	00034475W	1	00034475W	1	00034475W	1	00034475W	1	00034475W	1	00034475W
21	*PISTON	1	0A200809	1	0A200809	1	0A200809	1	0A200809	1	0A200809	1	0A200809	1	0A200809	1	0A200809	1	0A200809
22	*LINER, CYLINDER	1	01569032-0003	1	01569032-0003	1	01569032-0003	1	01569032-0003	1	01569032-0003	1	01569032-0003	1	01569032-0003	1	01569032-0003	1	01569032-0003
23	*HEAD, BOTTOM CYLINDER	1	0A204635	1	0A204635	1	0A204635	1	0A204635	1	0A204635	1	0A204635	1	0A204635	1	0A204635	1	0A204635
24	SCREW, HEX. HD. CAP (5/8 x 2 1/2) †	4	00000020-0055	4	00000020-0055	4	00000020-0055	4	00000020-0055	4	00000020-0055	4	00000020-0055	4	00000020-0055	4	00000020-0055	4	00000020-0055
25	SCREW, HEX. HD. CAP (5/8 x 3 1/2) †	16	00000020-0115	16	00000020-0115	16	00000020-0115	16	00000020-0115	16	00000020-0115	16	00000020-0115	16	00000020-0115	16	00000020-0115	16	00000020-0115
26	SCREW, HEX. HD. CAP (5/8 x 1 3/4) †	16	NOT USED	16	NOT USED	16	NOT USED	16	NOT USED	16	NOT USED	16	NOT USED	16	NOT USED	16	NOT USED	16	NOT USED
27	SCREW, SOC. HD. CAP (5/8 x 1 1/2) †	1	00801220-0006	1	00801220-0006	1	00801220-0006	1	00801220-0006	1	00801220-0006	1	00801220-0006	1	00801220-0006	1	00801220-0006	1	00801220-0006
28	PLUG, PIPE (1") †	2	NOT USED	2	NOT USED	2	NOT USED	2	NOT USED	2	NOT USED	2	NOT USED	2	NOT USED	2	NOT USED	2	NOT USED
29	PLUG, PIPE (1 1/4) †	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004
30	PLUG, PIPE (1 1/2) †	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004	2	00901921-0004
31	SCREW, SOC. HD. CAP (3/4 x 5 1/4) †	12	00902224-0057	12	00902224-0057	12	00902224-0057	12	00902224-0057	12	00902224-0057	12	00902224-0057	12	00902224-0057	12	00902224-0057	12	00902224-0057
32	SCREW, SOC. HD. CAP (3/4 x 6 1/4) †	3	00902224-0057	3	00902224-0057	3	00902224-0057	3	00902224-0057	3	00902224-0057	3	00902224-0057	3	00902224-0057	3	00902224-0057	3	00902224-0057
33	GASKET, COPPER (3 1/2)	2	00903729-0006	2	00903729-0006	2	00903729-0006	2	00903729-0006	2	00903729-0006	2	00903729-0006	2	00903729-0006	2	00903729-0006	2	00903729-0006
34	GASKET, SOLID (1 1/32 x 13/16 x 1/32)	1	00903943-0016	1	00903943-0016	1	00903943-0016	1	00903943-0016	1	00903943-0016	1	00903943-0016	1	00903943-0016	1	00903943-0016	1	00903943-0016
35	PISTON ROD PACKING AND PARTS	1	00700563-0003	1	00700563-0003	1	00700563-0003	1	00700563-0003	1	00700563-0003	1	00700563-0003	1	00700563-0003	1	00700563-0003	1	00700563-0003
36	STUD	2	00026127W	2	00026127W	2	00026127W	2	00026127W	2	00026127W	2	00026127W	2	00026127W	2	00026127W	2	00026127W
37	*PACKING, DURAMETALLIC	1	00034814W	1	00034814W	1	00034814W	1	00034814W	1	00034814W	1	00034814W	1	00034814W	1	00034814W	1	00034814W
38	RETAINER, PACKING	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED
39	GLAND, STUFFING BOX	1	00243853	1	00243853	1	00243853	1	00243853	1	00243853	1	00243853	1	00243853	1	00243853	1	00243853
40	TUBE, COPPER (1/4 x 8")	1	00804712	1	00804712	1	00804712	1	00804712	1	00804712	1	00804712	1	00804712	1	00804712	1	00804712
41	NUT, HEX. (5/8) †	4	00900160-0006	4	00900160-0006	4	00900160-0006	4	00900160-0006	4	00900160-0006	4	00900160-0006	4	00900160-0006	4	00900160-0006	4	00900160-0006
42	WASHER, PLAIN (5/8) †	2	00900322-0013	2	00900322-0013	2	00900322-0013	2	00900322-0013	2	00900322-0013	2	00900322-0013	2	00900322-0013	2	00900322-0013	2	00900322-0013
43	PLUG, PIPE (1/8) †	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED	1	NOT USED
44	ELBOW (1/4 T. x 1/8 P.T.) †	1	0090384-0003	1	0090384-0003	1	0090384-0003	1	0090384-0003	1	0090384-0003	1	0090384-0003	1	0090384-0003	1	0090384-0003	1	0090384-0003
45	SCRAPER RING ASSEMBLY AND PARTS	1	00701323-0001	1	00701323-0001	1	00701323-0001	1	00701323-0001	1	00701323-0001	1	00701323-0001	1	00701323-0001	1	00701323-0001	1	00701323-0001
46	COVER, SCRAPER RING	4	00900020-0013	4	00900020-0013	4	00900020-0013	4	00900020-0013	4	00900020-0013	4	00900020-0013	4	00900020-0013	4	00900020-0013	4	00900020-0013
47	*SCRAPER RING ASSEMBLY	1	00527344	1	00527344	1	00527344	1	00527344	1	00527344	1	00527344	1	00527344	1	00527344	1	00527344

* Recommended Spare † Standard Hardware Item, Procure Locally

SECOND STAGE CYLINDER AND PARTS

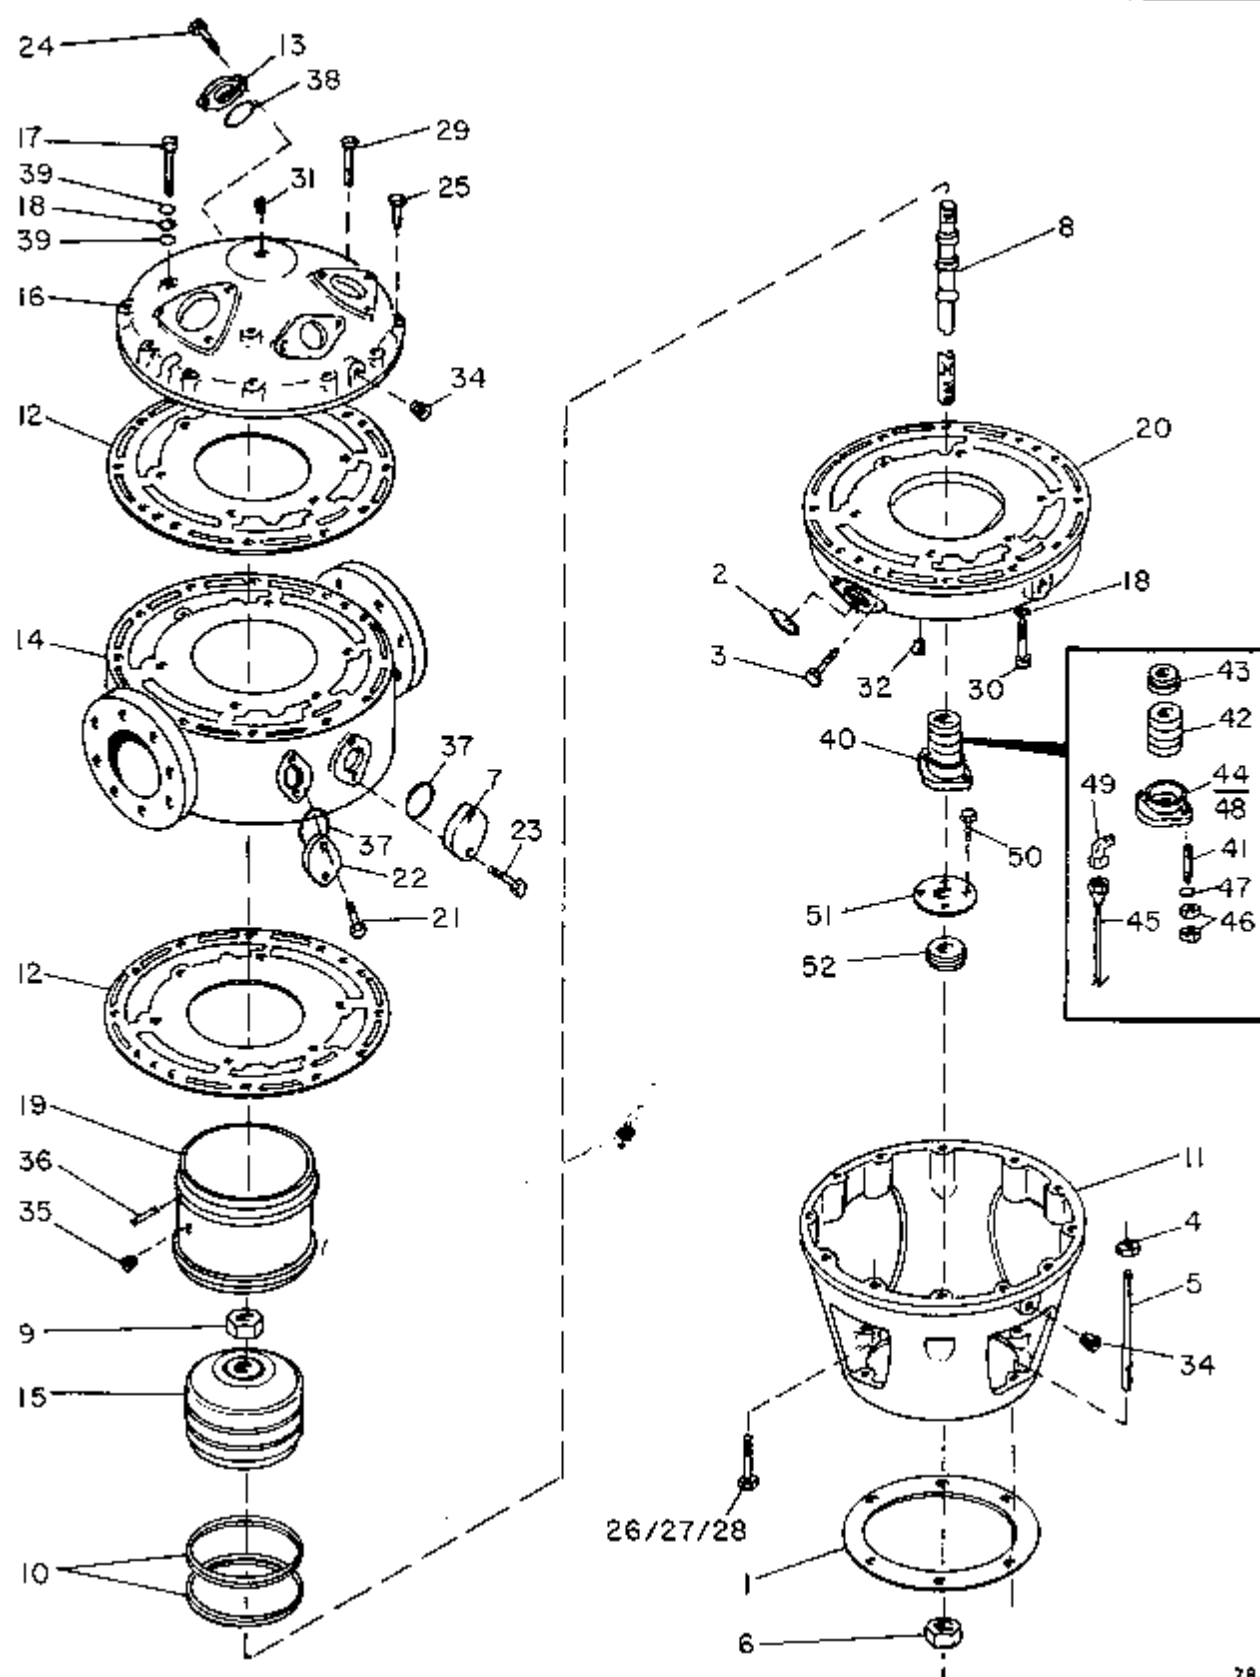

Ref. No.	Description	MODEL E/EH & B/BH 80 - 125 PSIG SIZE 9 1/4" DIA.		MODEL E/EH & B/BH 80 - 125 PSIG SIZE 10" DIA.	
		Qty.	Part No.	Qty.	Part No.
	INLET VALVE ASSEMBLY AND PARTS (SEE PAGE 13)	2	SEE PAGE 13	4	S
	DISCHARGE VALVE ASSEMBLY AND PARTS (SEE PAGE 13)	4	00700506-0016	4	S
	CYLINDER ASSEMBLY		00700502-0125		00700502-0123
1	GASKET, DISTANCE PIECE	1	00026187W	1	S
2	SPRING, VALVE RETAINING	3	00029721W1	4	S
3	SCREW, HEX. HD. CAP (5/8 x 2 1/4) †	18	00900020-0065	24	S
4	NUT, HEX. (3/4 - 10) †	6	00900093-0008	6	S
5	BOLT, STUD (3/4 x 5 1/4) †	6	00902772-0224	6	S
	CYLINDER AND PARTS		00527593-0012		00527593-0013
6	NUT, PISTON ROD	1	00015172W	1	S
7	COVER, CLEANING HOLE	2	00019814W3	1	S
8	*ROD, PISTON	1	00026128W2	1	S
9	*NUT, PISTON ROD	1	01760366-0015	1	S
10	*RING, PISTON	2	00033109W	2	00027607W
11	PIECE, DISTANCE	1	00027451W3	1	00202077
12	*GASKET, CYLINDER HEAD	2	00043570W	2	00202265
13	CAP, CHECK VALVE	2	00028147W	2	00202122
14	CYLINDER	1	00043567W	1	00202078
15	*PISTON	1	03760466-0002	1	03760466-0003
16	HEAD, TOP CYLINDER	1	0A202436	1	0A202080
17	BOLT, LUBRICATION	1	01600271	1	S
18	WASHER	8	00026702W	6	S
19	*LINER, CYLINDER	1	01608018-0006	1	01608020-0001
20	HEAD, BOTTOM CYLINDER	1	0A202437	1	0A202079
21	SCREW, HEX. HD. CAP (5/8 x 1 1/4) †			2	00900020-0025
22	COVER, CLEANING HOLE			1	00206776
23	SCREW, HEX. HD. CAP (5/8 x 2) †	4	00900020-0055	2	S
24	SCREW, HEX. HD. CAP (5/8 x 2 1/4) †	4	00900020-0065	4	S
25	SCREW, HEX. HD. CAP (5/8 x 3 1/2) †	12	00900020-0115	14	S
26	SCREW, HEX. HD. CAP (5/8 x 4) †			6	00900020-0135
27	SCREW, HEX. HD. CAP (5/8 x 4 3/4) †			8	00900020-0165
28	SCREW, SOC. HD. CAP (5/8 x 3) †	12	00902224-0831		
29	SCREW, SOC. HD. CAP (3/4 x 5) †			4	00902224-0868
30	SCREW, SOC. HD. CAP (3/4 x 6) †	7	00902224-0871	5	S
31	PLUG, PIPE (1/4) †	2	00901220-0002	4	S
32	PLUG, PIPE (3/8) †	1	00901220-0003	3	S
33	PLUG, PIPE (3/4) †	1	00901220-0005	1	S
34	PLUG, PIPE (1") †	7	00901220-0006	3	S
35	PLUG, PIPE (1 1/8) †	2	00901924-0002	2	S
36	PIN, DOWEL (1/4 x 1/2) †			1	00904584-0006
37	GASKET, COPPER (3 1/2)	2	00903729-0006	2	S
38	GASKET, (3 1/16 x 2 13/16 x 5/64)	2	00903729-0029	2	S
39	GASKET, SOLID (1 3/32 x 13/16 x 1/32)	2	00903943-0016	2	S
40	PISTON ROD PACKING AND PARTS	1	00700563-0003	1	S
41	STUD	2	00026127W	2	S
42	*PACKING, DURAMETALLIC	1	0034614W	1	S
43	RETAINER, PACKING		NOT USED		S
44	GLAND, STUFFING BOX	1	00243953	1	S
45	TUBE, COPPER (1/4 x 8")	1	00804712	1	S
46	NUT, HEX. (5/8) †	4	00900160-0006	4	S
47	WASHER, PLAIN (5/8) †	2	00900322-0013	2	S
48	PLUG, PIPE (1/8) †		NOT USED		S
49	ELBOW (1/4 T. x 1/8 P.T.) †	1	00905384-0003	1	S
50	SCRAPER RING ASSEMBLY AND PARTS	1	00701323-0001	1	S
51	SCREW, HEX. HD. CAP (3/8 x 1) †	4	00900020-0013	4	S
52	COVER, SCRAPER RING	1	00027123W1	1	S
	*SCRAPER RING ASSEMBLY	1	00527344	1	S

6/81

6/81


† Standard Hardware Item, Procure Locally

• Recommended Spare

S Same Part Number as Preceding Column

INLET VALVE


DISCHARGE VALVE

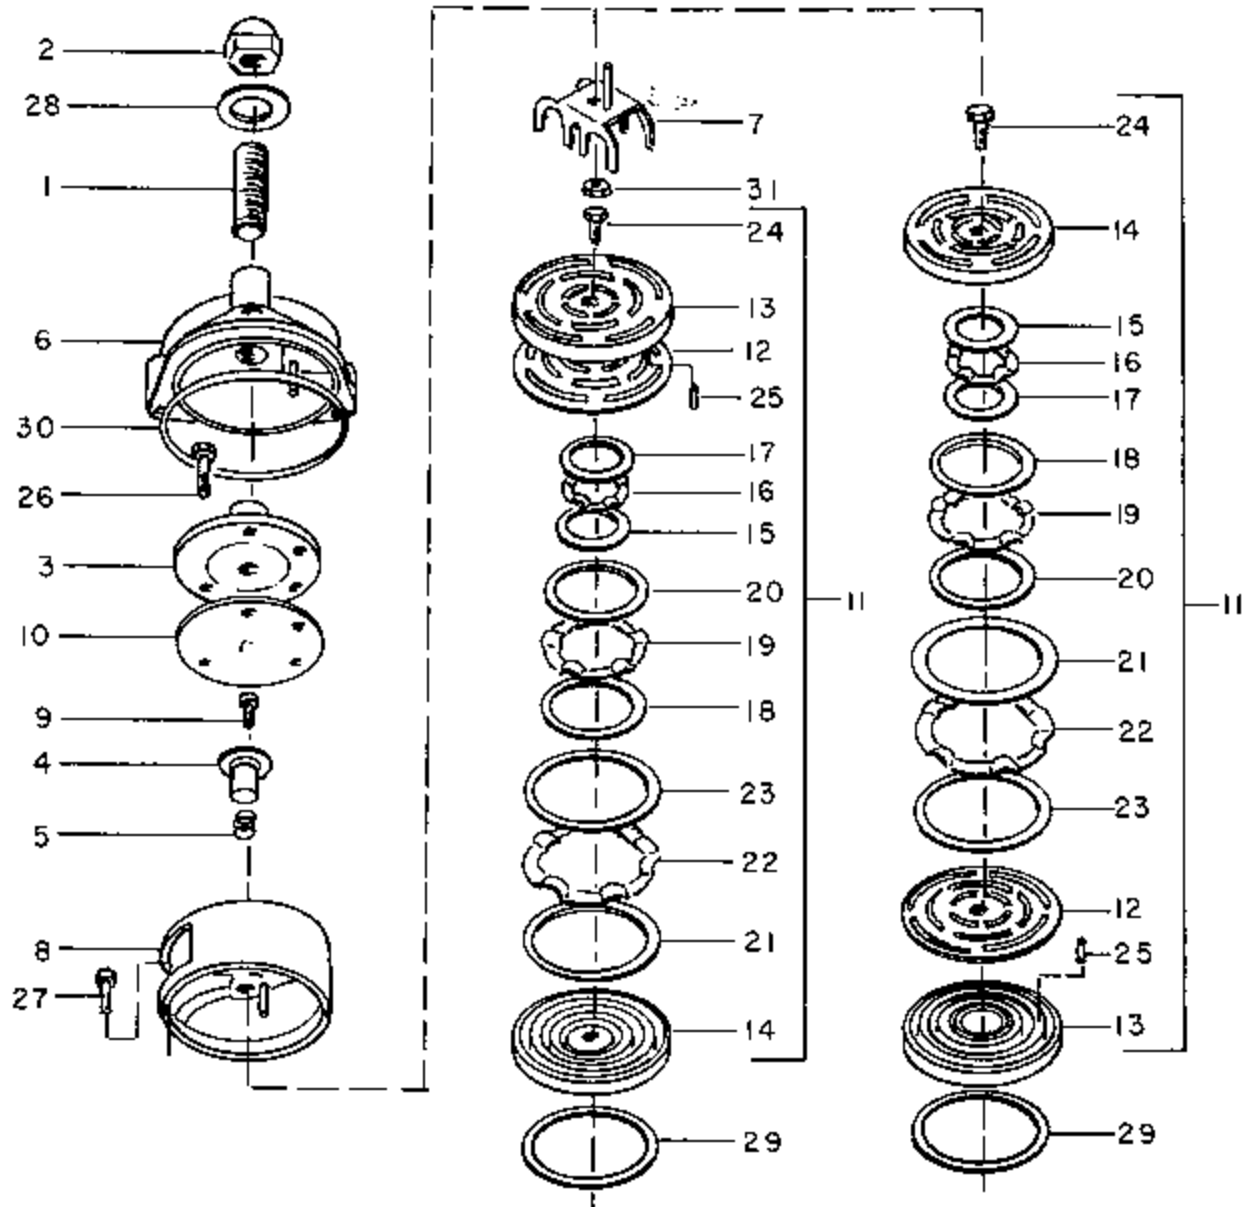

Ref. No.	Description	INLET VALVE ASSEMBLY				DISCHARGE VALVE ASSEMBLY	
		ALL MODELS WITH TOTAL CLOSURE CONTROL		ALL MODELS WITH INLET VALVE REGULATION			
		Qty.	Part No.	Qty.	Part No.	Qty.	Part No.
1	VALVE ASSEMBLY AND PARTS *		00700506-0015		00700506-0018		00700506-0016
2	*SCREW, SET	1	00910400-0093	1	00029181W1	1	00910400-0093
3	*NUT, ACORN	1	00903742-0012	1	00043743W	1	00903742-0012
4	*CAP, DIAPHRAGM			1	00205052		
5	*BUTTON, DIAPHRAGM			1	00205053		
6	*SPRING			1	00205055		
7	*CAP, VALVE	1	0A205965	1	S	1	S
8	*YOKE, UNLOADER			1	00206841		
9	*CAGE, VALVE	1	0X40309W	1	0A206842	1	00040312W
10	*SCREW, SP'L. SOC. HD.			1	00212467		
11	*DIAPHRAGM			1	01249284		
12	*VALVE ASSEMBLY	1	00514006-0011	1	S	1	00514006-0012
13	SEAT, VALVE		NOT USED		S		S
14	*SEAT, VALVE	1	00238312	1	S	1	00213918
15	GUARD, VALVE	1	00040311W2	1	S	1	00044759W
16	*PLATE, INNER REACTION	1	00205180	1	S	1	S
17	*SPRING, INNER	2	00200438	2	S	2	S
18	*VALVE, INNER	1	00043795W	1	S	1	S
19	*PLATE, MIDDLE REACTION	1	00205179	1	S	1	S
20	*SPRING, MIDDLE	1	00027298W1	1	S	2	S
21	*VALVE, MIDDLE	1	00043796W	1	S	1	S
22	*PLATE, OUTER REACTION	1	00205183	1	S	1	S
23	*SPRING, OUTER	1	00040316W	1	S	2	S
24	*VALVE, OUTER	1	00043797W	1	S	1	S
25	*SCREW, HEX. HD, CAP	4	00900248-0501	4	S	4	00900244-0002
26	PIN, SPRING		NOT USED		S		S
27	*SCREW, HEX. HD, CAP (5/16 x 3/4) †			3	00900020-0002		
28	*SCREW, SOC. HD, CAP		NOT USED		S		S
29	*GASKET	1	00903729-0002	1	S	1	S
30	*GASKET	1	00903729-0198	1	S	1	S
31	*GASKET	1	00903729-0138	1	S	1	S
	NUT, LOCK		NOT USED		S		S
	NUT, HEX. (5/16 - 24) †			1	00900176-0003		
	WASHER, LOCK (5/16) †			1	00900586-0006		
NOTE: TO IDENTIFY YOUR CONTROL SYSTEM, SEE INDEX - "CONTROL PARTS AND PIPING"							
* NOTE: FOR QUANTITY USED FOR EACH MODEL, REFER TO CYLINDER ASSEMBLY LIST PAGE 9 & 11.							
		† 8-81		8-81		8-81	

903944

CONTROL PARTS AND PIPING TOTAL CLOSURE CONTROL

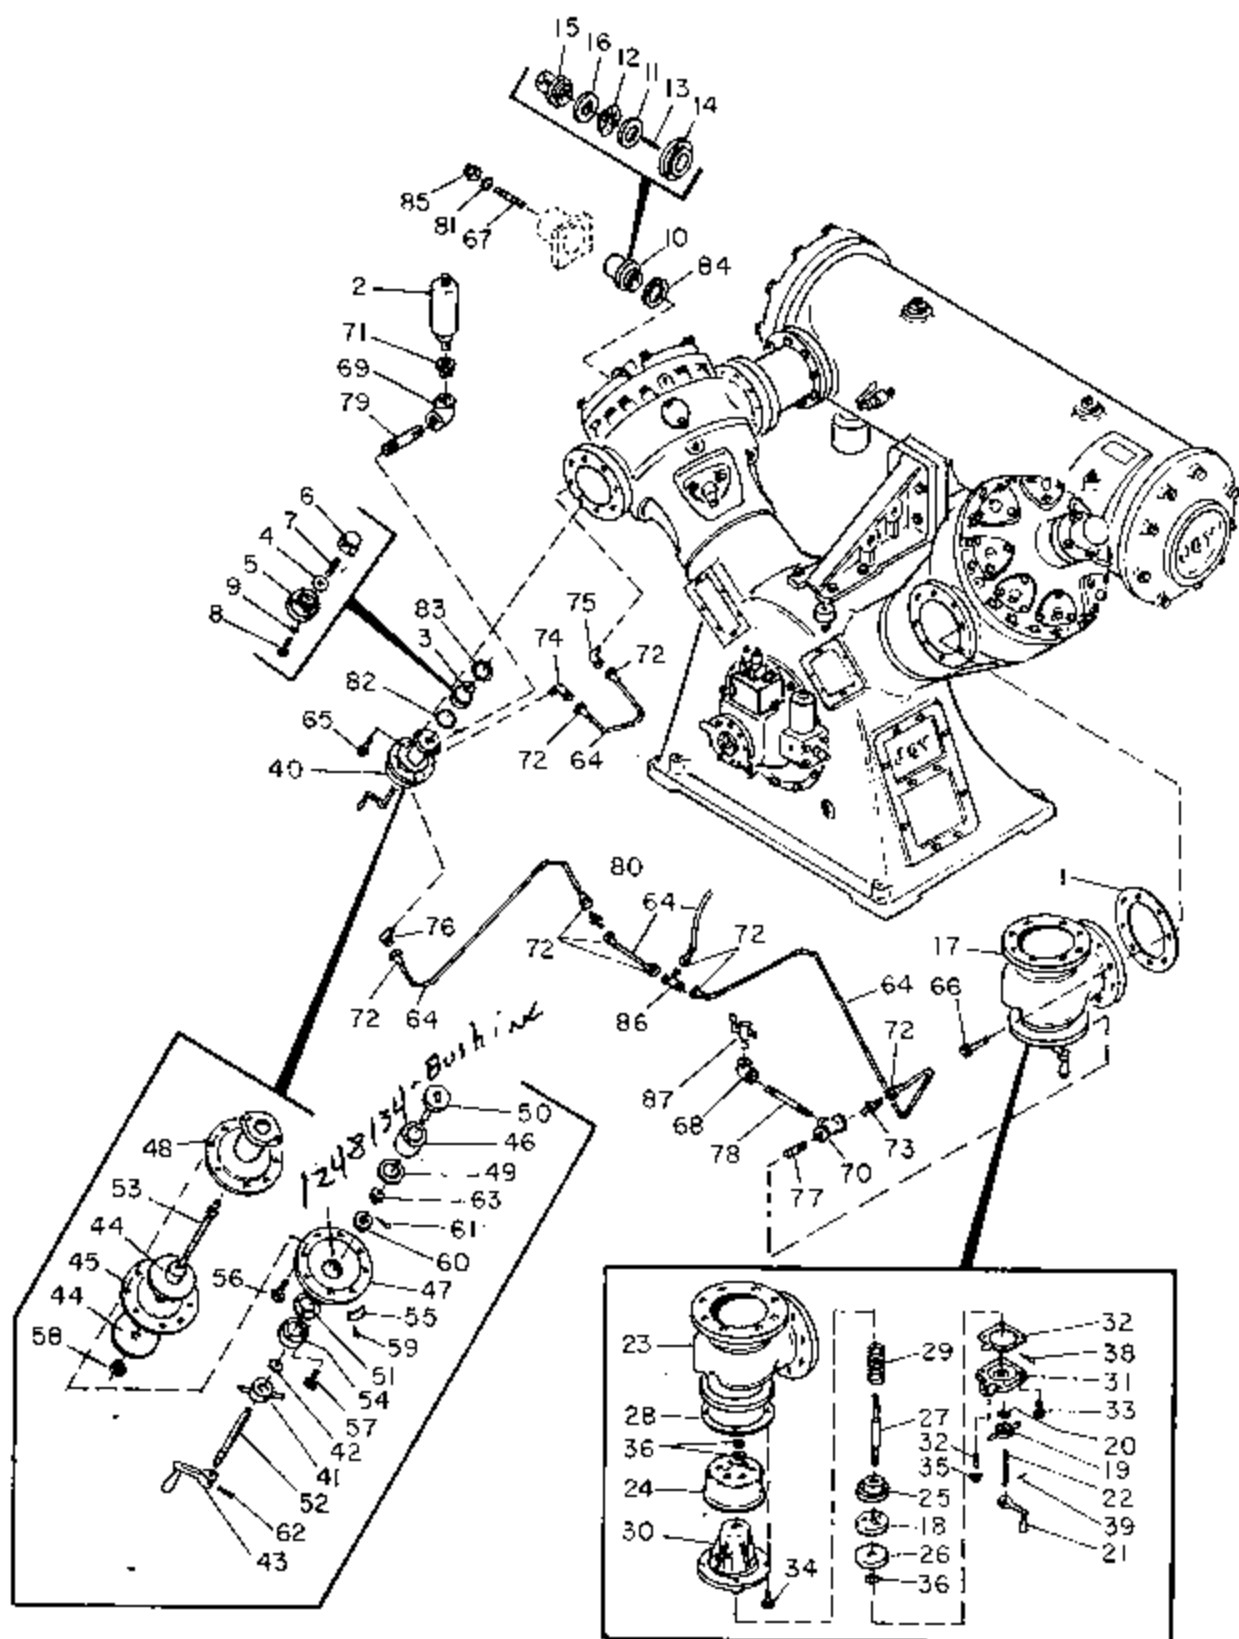

CONTROL PARTS AND PIPING TOTAL CLOSURE CONTROL


PAGE 15

Ref. No.	Description	ALL MODELS WITH TOTAL CLOSURE CONTROL	
		Qty.	Part No.
44	DIAPHRAGM PLATE	2	00042581W
45	*DIAPHRAGM	1	00042582W
46	*PACKING	1	0A200770
47	DIAPHRAGM GUARD ASSEMBLY	1	00518654
48	DIAPHRAGM BODY ASSEMBLY	1	00518655
49	WASHER	1	01248135
50	DIAPHRAGM PISTON	1	01248136
51	GASKET	1	01248137
52	ADJUSTING SCREW	1	01248138
53	VALVE STEM	1	01248139
54	DIAPHRAGM GUARD COVER	1	01248140
55	INSTRUCTION PLATE	1	01248191
56	SCREW, CAP (3/8 x 1 1/4) †	8	00900020-0013
57	SCREW, CAP (3/8 x 1 1/4) †	4	00900020-0023
58	NUT	4	00900178-0005
59	SCREW, DRIVE (2 x 1/4) †	4	00900258-0009
60	WASHER, FLAT (1/2) †	1	00900322-0011
61	COTTER PIN (1/8 x 3/4) †	1	00900620-0016
62	GROOVE PIN	1	00902018-0086
63	NUT, ACORN BR. (3/8 x 18) †	1	00903743-0007
64	TUBE, COPPER (1/4 x 14' 3")	1	00804712
65	SCREW, HEX. HD. CAP (5/8 x 1 1/2) †	2	00900020-0035
66	SCREW, HEX. HD. CAP (3/4 x 2 1/4) †	8	00900020-0066
67	SCREW, SOG. HD. SET (3/4 x 3)	2	00900511-0263
68	ELBOW, 90° STREET (1/8) †	1	00901023-0001
69	ELBOW (1 1/2) †	1	00901023-0008
70	TEE, PIPE (1/8) †	1	00901090-0001
71	BUSHING, PIPE (1 1/2 x 1) †	1	00901160-0020
72	NUT, UNION FEMALE (1/4 O.D. T. x 1/8 P.T.) †	9	00901753-0003
73	ADAPTER, BRASS (1/4 O.D. T. x 1/8 P.T.) †	1	00901763-0003
74	ELBOW, MALE (1/4 x 1/8) †	1	00901773-0003
75	ELBOW, MALE (1/4 x 1/4) †	1	00901773-0004
76	ELBOW, 45° (1/4 T. x 1/8 P.T.)	1	00901774-0003
77	NIPPLE, PIPE (1/8 x 2) †	1	00902466-0055
78	NIPPLE, PIPE (1/8 x 5) †	1	00902466-0163
79	NIPPLE, PIPE (1 1/2 x 10) †	1	00902466-0278
80	UNION, COUPLING (1/4) †	1	00902805-0003
81	*GASKET (13/16 x 1 3/16)	2	00903729-0002
82	*GASKET (VICTOR #2423)	1	00903729-0087
83	GASKET (VICTOR #2489)	1	00903729-0088
84	*GASKET (2 1/4 x 2 3/4 x 5/64)	2	00903729-0158
85	NUT, ACORN	2	00903742-0012
86	TEE (1/4 T.)	1	00904047-0002
87	CUP, PRIMING (1/8)	1	00904828-0001

6-51

Ref. No.	Description	ALL MODELS WITH TOTAL CLOSURE CONTROL	
		Qty.	Part No.
1	CONTROL PARTS AND PIPING	1	00701327-0073
2	*GASKET	1	00009218W
3	MUFFLER	1	0A23905
4	*VALVE, HP RELIEF	1	00514006-0044
5	*VALVE	1	00042583W
6	SEAT	1	00214363
7	GUARD	1	00214364
8	*SPRING	1	00214365
9	SCREW, HEX. HD. CAP (1/4 x 7/8) †	3	00900037-0396
10	WASHER, LOCK (1/4) †	3	00900305-0001
11	*VALVE, HP RELIEF CHECK	2	00514006-0065
12	*VALVE, INNER	2	00043790W
13	*SPRING, INNER VALVE	2	00043790W
14	STUD	1	00214361
15	*SEAT, VALVE	1	00214362
16	GUARD	1	00217270
17	PLATE, REACTION	1	01605077-0001
18	VALVE, TOTAL CLOSURE UNLOADING	1	00514007-0005
19	*CUP, LEATHER	1	00016085W1
20	NUT, JAM	1	00018128W
21	*PACKING, LEATHER	1	00018129W
22	HANDLE	1	00018675W
23	SCREW, ASJ	1	00018675W
24	BODY, UNLOADER VALVE	1	00028218W1
25	VALVE, UNLOADER	1	00028218W1
26	PISTON, VALVE	1	00028228W
27	WASHER, PACKING	1	00028229W
28	STEM, VALVE	1	00028188W
29	*GASKET, CYLINDER TO BODY	1	00028343W
30	*SPRING, UNLOADER	1	00028582W
31	CYLINDER, UNLOADER	1	00202700
32	COVER, CYLINDER	1	00202701
33	*GASKET, UNLOADER CYLINDER TO COVER	1	00202768
34	SCREW, HEX. HD. CAP (1/2 - 13 x 1) †	4	00900020-0035
35	NUT, HEX. (1/4 - 20) †	1	00900160-0002
36	NUT, HEX. (5/8) †	1	00900160-0006
37	SCREW, SET (1/4 x 1)	1	00900508-0136
38	PIN, COTTER (3/8 x 1) †	1	00900620-0017
39	PIN, (3/16 x 1 1/4) †	1	00902018-0096
40	DIAPHRAGM VALVE ASSEMBLY	1	00518641
41	JAM NUT	1	00018128W
42	*PACKING	1	00018129W
43	HANDLE	1	00018675W


† Standard Hardware Item, Procure Locally • Recommended Spare

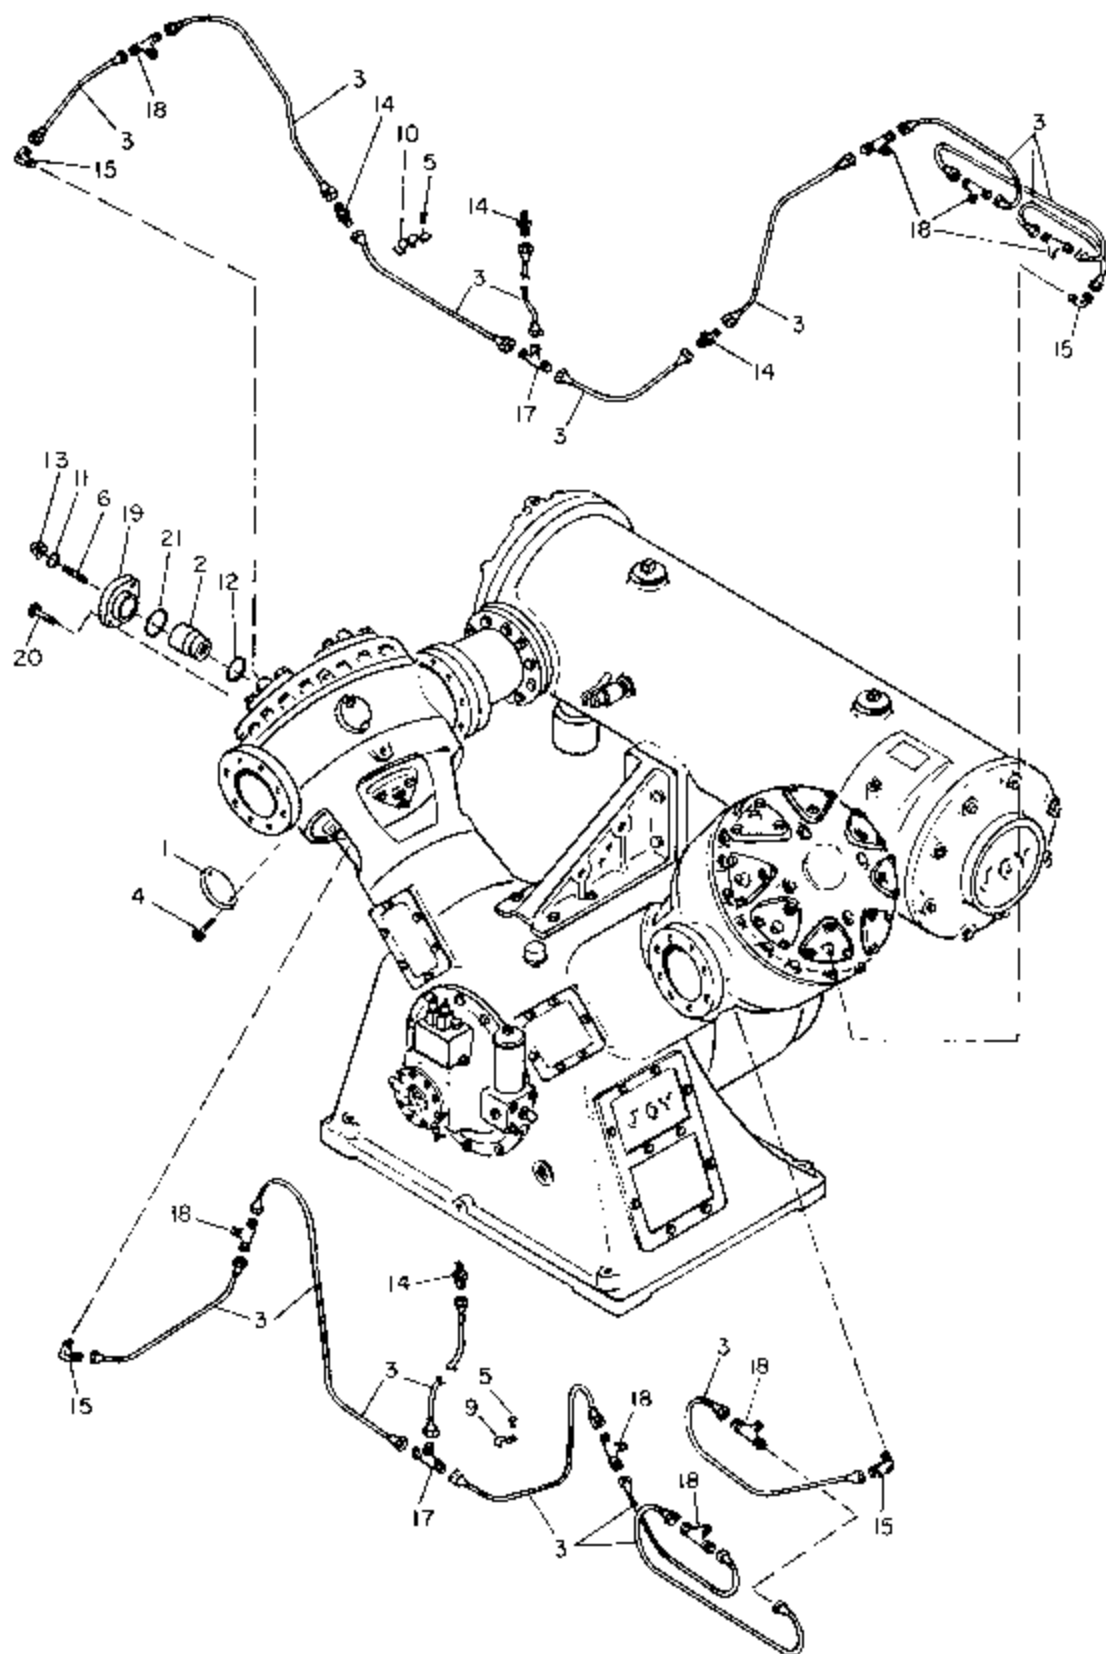**CONTROL PARTS AND PIPING
INLET VALVE REGULATION**

CONTROL PARTS AND PIPING INLET VALVE REGULATION

PAGE 17

Ref. No.	Description	ALL MODELS WITH INLET VALVE REGULATION	
		Qty.	Part No.
	CONTROL PARTS AND PIPING		00701327-0007
1	. COVER, RELIEF VALVE PORT	1	00030716W
2	. PLUG, CHECK VALVE	2	00033294W1
3	. TUBE, COPPER (1/4 x 21'-6")	1	00804712
4	. SCREW, HEX. HD. CAP (3/8 x 1 1/4) †	2	00900020-0025
5	. SCREW, RD. HD. MACH. (1/4 - 20 - 1/4) †	4	00900333-0453
6	. SCREW, SOC. HD. SET (3/4 x 3 1/2)	2	00900511-0293
7	. COUPLING, PIPE (1/4) †	1	00901286-0002
8	. NIPPLE, PIPE (1/4 x 6) †	1	00902466-0200
9	. CLIP, TUBE SINGLE †	2	00902904-0001
10	. CLIP, DOUBLE (1/4 O.D.) †	2	00902932-0001
11	. *GASKET (13/16 x 1 3/16)	2	00903729-0002
12	. *GASKET, COPPER (2 9/32 x 2 5/8 x 11/64)	2	00903729-0024
13	. *NUT, ACORN	2	00903742-0012
14	. COUPLING	4	00906249-0004
15	. ELBOW (1/4 T. x 1/8 P.T.)	4	00906255-0042
16	. ELBOW, 90° (1/4 x 1/4 P.T.)	1	00906255-0044
17	. TEE (1/4 T.)	2	00906257-0004
18	. TEE (1/4 O.D. x 1/8 P.T.)	8	00906259-0042
19	. CAP, CHECK VALVE	2	00028147W
20	. SCREW, HEX. HD. CAP (5/8 x 2 1/4) †	4	00900020-0065
21	. GASKET (3 1/16 x 2 13/16 x 5/64) ———— SEE PAGE 11	2	00903729-0029

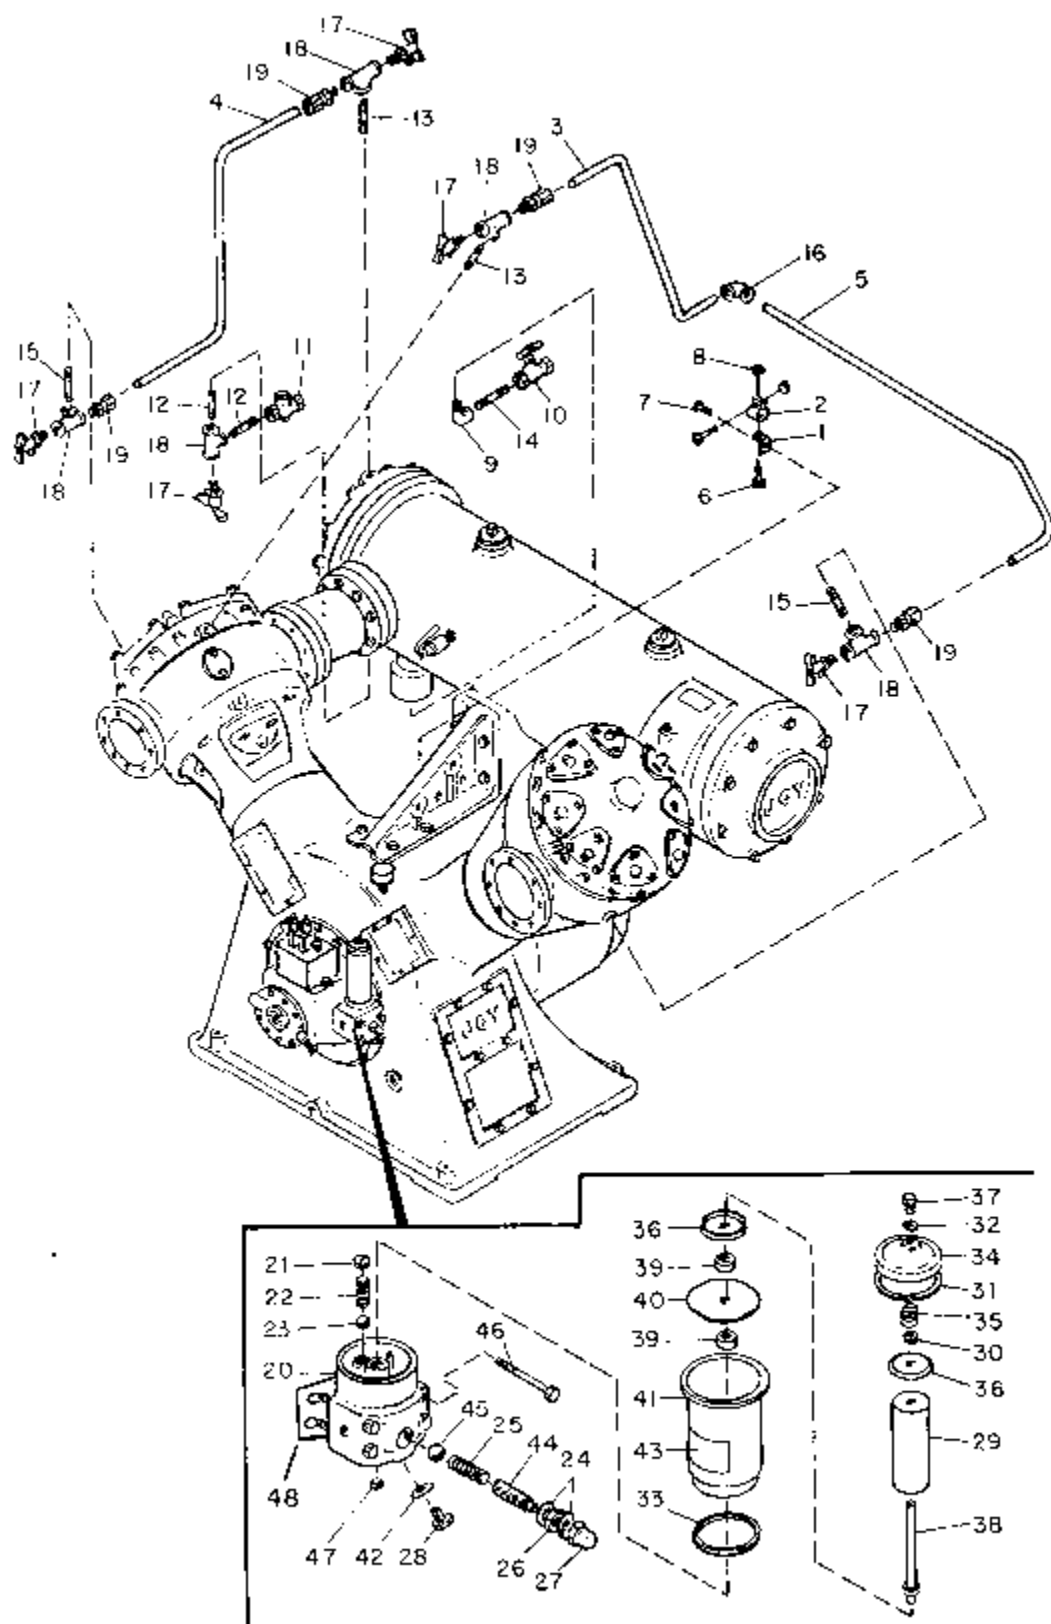


Ref. No.	Description	ALL MODELS WITH TOTAL CLOSURE CONTROL		ALL MODELS WITH INLET VALVE REGULATION	
		Qty.	Part No.	Qty.	Part No.
	WATER PIPING				
1	BRACKET	1	00700515-0422	1	S
2	HANGER, CONDUIT (1")	1	00241416	1	S
3	TUBE	1	00242201	1	S
4	TUBE	1	01609325-0001	1	S
5	TUBE	1	01609325-0002	1	S
6	SCREW, HEX. HD. CAP (1/4 x 20 x 1) †	1	01609325-0003	1	S
7	SCREW, HEX. HD. CAP (1/4 x 1/2) †	1	00900020-0011	1	S
8	NUT, HEX. (1/4 x 20) †	2	00900020-0387	1	S
9	ELBOW, 90° (3/4) †	1	00900160-0002	2	S
10	VALVE, GLOBE (3/4) †	1	00901046-0005	1	S
11	COCK, BRASS STEAM 125# (1") †	1	00901298-0026	1	S
12	NIPPLE, PIPE (1 x 2) †	2	00901313-0005	1	S
13	NIPPLE, PIPE (1 x 2 3/4) †	3	00902466-0060	2	S
14	NIPPLE, PIPE (3/4 x 4 1/2) †	1	00902466-0087	3	S
15	NIPPLE, PIPE (1 x 5 1/2) †	2	00902466-0149	1	S
16	ELBOW (1")	1	00902466-0186	2	S
17	COCK, BRASS DRAIN (1/2) †	5	00902975-0016	1	S
18	TEE, REDUCING (1 x 1/2 x 1) †	5	00903873-0023	5	S
19	CONNECTOR	4	00905329-0034	5	S
			00906079-1616	4	S
	OIL FILTER ASSEMBLY	1	00527480	1	S
20	BASE	1	00203428	1	S
21	PLUG	1	00203429	1	S
22	SPRING	1	00203430	1	S
23	BALL, RELIEF VALVE	1	00203431	1	S
24	*GASKET	2	00203432	2	S
25	*SPRING	1	00203433	1	S
26	NUT, HEX	1	00203456	1	S
27	NUT, ACORN	1	00203457	1	S
28	PLUG, DRAIN	1	00203459	1	S
	*KIT, ELEMENT REPLACEMENT		00701601-0488		S
29	ELEMENT	1	NO NUMBER	1	S
30	GROMMET	1	NO NUMBER	1	S
31	GASKET	1	NO NUMBER	1	S
32	GASKET	1	NO NUMBER	1	S
33	GASKET	1	NO NUMBER	1	S
	*KIT, OIL FILTER REPLACEMENT		00701601-0499		S
34	*COVER	1	NO NUMBER	1	S
35	*SPRING	1	NO NUMBER	1	S
36	*WASHER, CUP	2	NO NUMBER	2	S
37	*SCREW, CAP	1	NO NUMBER	1	S
38	*TUBE ASSEMBLY	1	NO NUMBER	1	S
39	*SPACER	2	NO NUMBER	2	S
40	*PLATE	1	NO NUMBER	1	S
41	*SHELL	1	NO NUMBER	1	S
42	GASKET	1	01607994	1	S
43	DECAL	1	01607998	1	S
44	SCREW, ADJUSTING	1	01760332-0002	1	S
45	BALL	1	01760439-0001	1	S
46	SCREW, HEX. HD. CAP †	4	00900020-0114	4	S
47	PLUG	1	00901922-0001	1	S
48	GASKET †	1	00026186W	1	S
	CONTROL PANEL PARTS				
*	BRACKET, CONTROL PANEL	1	01701653-0002		00701653-0003
*	SCREW, HEX. HD. CAP (5/16 - 18) †	2	00035411W	1	01603238
*	SCREW, HEX. HD. CAP (3/8 x 3/4) †	2	00900020-0002	2	S
			00900020-0003	2	S
	EQUIPMENT, REGULAR				
*	FUNNEL, WATER (1 x 1 1/2)	1	00700500-0386		00700500-0380
*	WRENCH, SPECIAL	1	00029218W	1	S
*	TRAP, CONDENSATE	1	00214917	1	S
*	VALVE, CONDENSATE CHECK	1	00518396-0003	1	S
			00527513		

6 31

6 32

* FOR REPLACEMENT (OR TO CONVERT OLDER MODEL FILTERS) ORDER FIELD CONVERSION KIT 00701601-0499.
INCLUDES PARTS MARKED (*) PLUS PARTS IN ELEMENT KIT 00701601-0488.

LUBRICATOR, PIPING AND PARTS

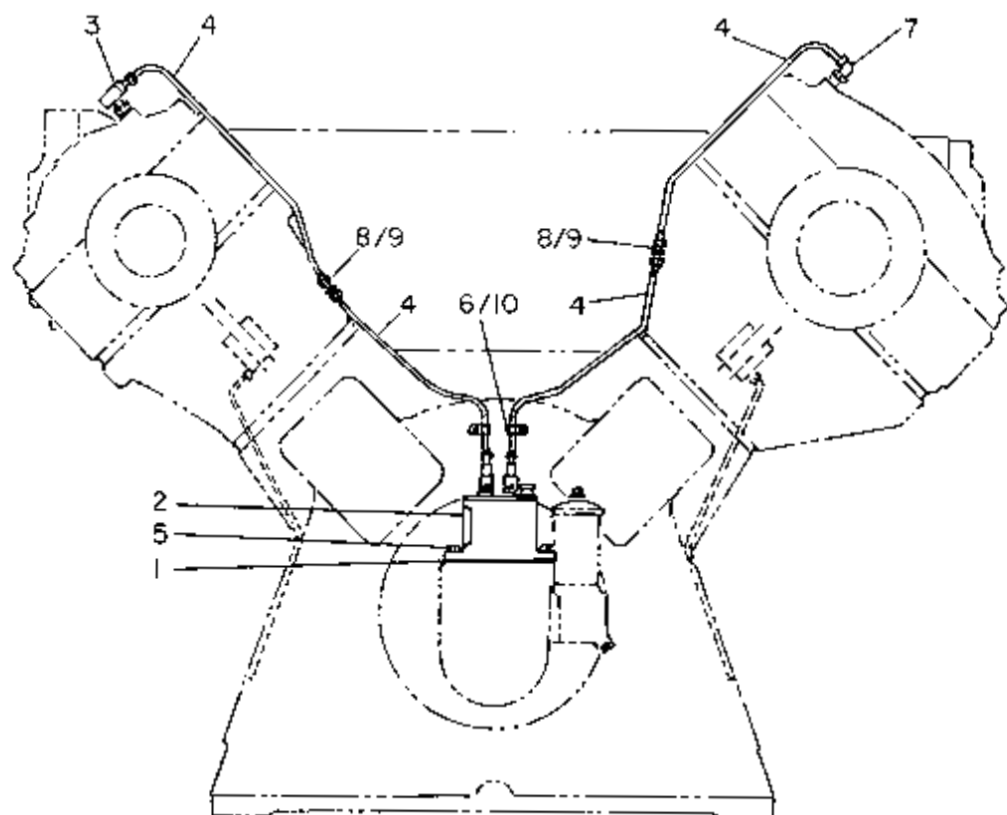

78-124

Ref. No.	Description	ALL MODELS	
		Qty.	Part No.
1	LUBRICATOR, PIPING AND PARTS		00700507-0216
2	GASKET, LUBRICATOR	1	00026006W
3	LUBRICATOR ASSEMBLY *	1	00526721
4	VALVE, ANGLE CHECK	1	00527701-0004
5	TUBE, COPPER (1/4 - 10'-2")	1	00804712
6	SCREW, HEX. HD. CAP (1/2 x 1) †	3	00900020-0014
7	SCREW, RD. HD. MACH. (1/4 - 20 x 1/4) †	4	00900333-0453
8	ELBOW, 90° (1/4) †	2	00901047-0002
9	NUT, FEMALE UNION (1/4 O.D. T.) †	4	00901753-0003
10	UNION, COUPLING (1/4) †	2	00902805-0003
	CLIP, TUBE - SINGLE †	4	00902904-0001

8/81

* FOR REPAIR PARTS CONTACT LUBRICATOR MANUFACTURER OR JOY MANUFACTURING CO. GIVE MANUFACTURER NAME AND COMPLETE IDENTIFICATION (MODEL, SERIAL NUMBER).

† Standard Hardware Item, Procure Locally * See Separate Parts List